Rolife

Sunshine Town

TGB02

Immersed in leisurely time of the town to cherish in the endless dusk.

Pictures for reference only. Please subject to our existing products.

⚠ WARNING

- The product requires 2“AAA/LR03/AM4 1.5V” batteries. (Batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity (+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly. If the part is damaged, fix it well before assembly.
- Please keep the product away from substances flammable and humid environments to prevent damage.
- The instruction must be retained since it contains important information.

⚠ ATTENTION

- The product is suitable for children age 14+. Children should be accompanied by adults while assembling.
- Some small parts and electronic components are included, children must assemble under the guidance and supervision of adults in case of swallowing by mistake or choking.
- Some auxiliary tools are required to assemble. Please choose reasonably to avoid injury.
- Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
- Please carefully cut the parts and make sure they are firmly pasted when using glue.
- Please install the electronic components correctly and test whether the circuit is normal after completion.
- Please don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please clean the product with clean soft cloth, sand the board bur lightly with sandpaper.
- Glue is a gift not for sale. If it becomes dry or excessive glue due to time or environmental problems, you can use your own glue to assemble.

★ Due to customs policy in international shipping , the batteries, glue or pigment maynot be included.Please prepare them yourself.

Equipped with 3 controllable lights

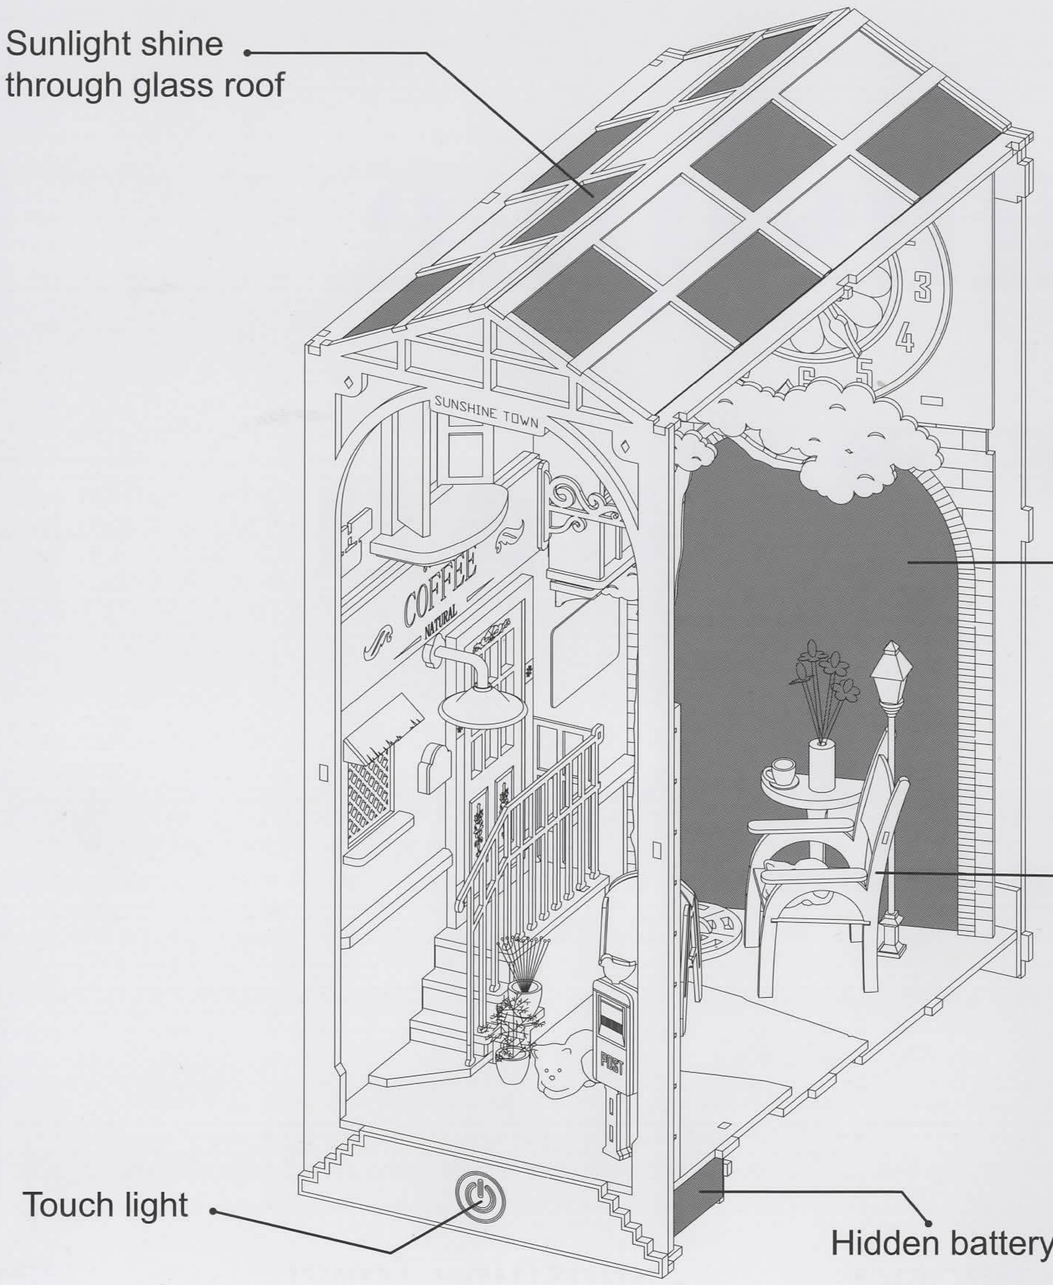

Parts list

Due to custom policy in international shipping, the batteries, glue or pigment may not be included. Please prepare them yourself.

Bag No.1

Name	Battery Box	Warm light lamp (White-yellow wire)	Warm light lamp (Black-red wire)	Screws	Street lamp
No.	P1	P2	P3	P4	P5
Picture					
Quantity	1	1	1	2	1

Bag No.2

Name	Lamp-shades	Stamens	Screw-driver	White cat	Yellow cat	Flower-pots	Wood post	Saucer	Teacup	Tape
No.	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15
Picture										
Quantity	2	2	1	1	1	2	1	1	1	1

Bag No.3

Name	Coral grass
No.	P16
Picture	
Quantity	1

Bag No.4

Name	Babysbreath
No.	P17
Picture	
Quantity	1

Name	Heat-shrink tube	White latex	Brush	Mirror	Paper-cut	Pigment
No.	P18	P19	P20	P21	P22	P23
Picture						
Quantity	1	1	1	1	1	1

Q&A

Q1: How to assemble flowers into flowerpots&vases?

A1: **Cut flowers in different sizes according to illustrations.**
Apply some glue on the holes and sides of flowerpots. Wait until it gets dried.

Q2: How many times should the shaded areas be painted?

A2: **The main color of this product is white. Please paint it 2 or 3 times until it gets close to the whiteboard.**

Q3: Do all shaded areas need to be painted?

A3: Because some blind spots cannot be seen.
Paint all visible borders white of the parts except for some special annotations.

Q4: Some words of parts are reversed, how to handle it?

A4: **All words will look normal in the mirror after assembly.**

Q5: Why are there some hints about glue when assembling part j?

A5: Using too much glue on **part j** will affect the appearance of completed products.
So you should apply a dab of glue here according to illustrations.

Q6: What if the light cannot work after connecting the battery box with the lights?

A6: 1. Firstly, **check the wires connection** (Connect same color wires together).
Then, check if you have loaded the batteries properly and if the switch is turned on.
2. Turn off the Battery Box switch. Then tear off the insulation tape. Check if copper wires are broken and re-connect the wires.

Instructions

1. The differences of P2&P3

	P2	P3
Color	Yellow-white wire	Black-red wire
Thickness	Thick wire	Thin wire

2. Signs illustration

- Step 1
- Step 2
- Step 3
- The printed side
- The blank side
- Notice
- Apply a dab of glue here and press 5s.

1

Please read Q&A on page 2 before assembling.

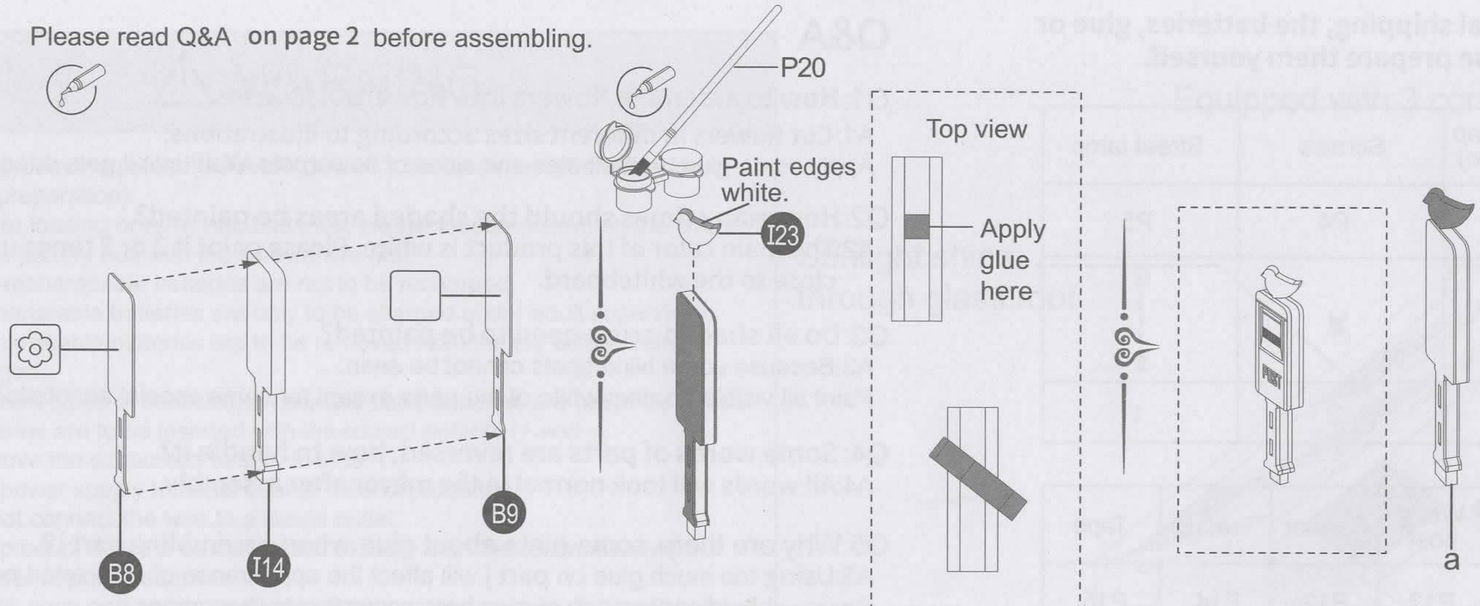

Paint the remaining frames of I23 white, and glue its bottom.Close the cover of P20 after using.

2

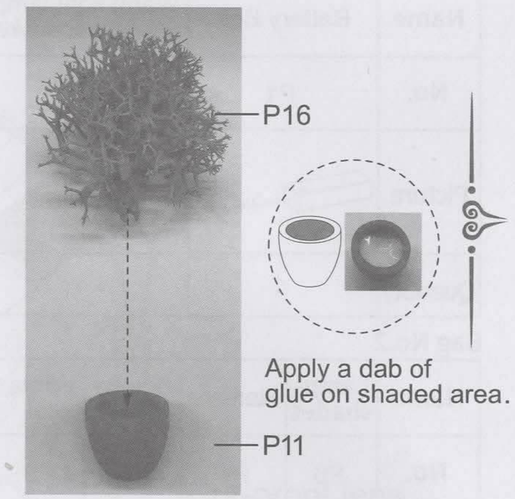

Trim P16 at will.Fix with glue. Do not pass P16 through the bottom hole of P11.

3

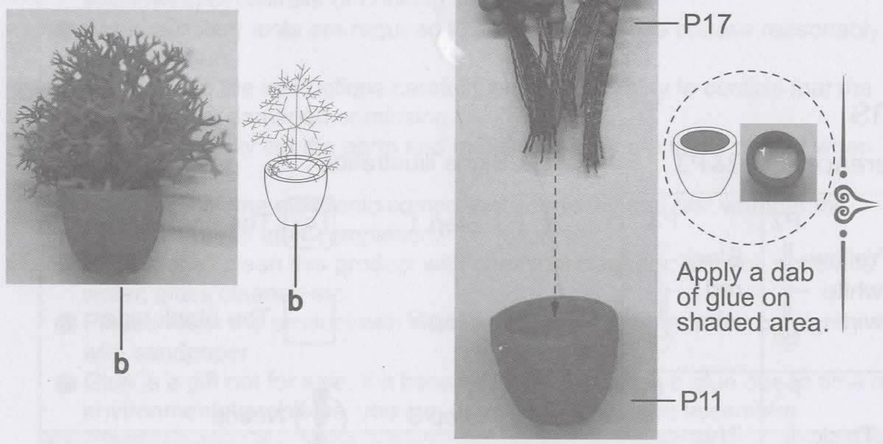

Trim P17 at will.Then twine the bottom into one string. Swirl its end into P11 and glue.

Cut the excess part. Then put the remaining into P11.

4

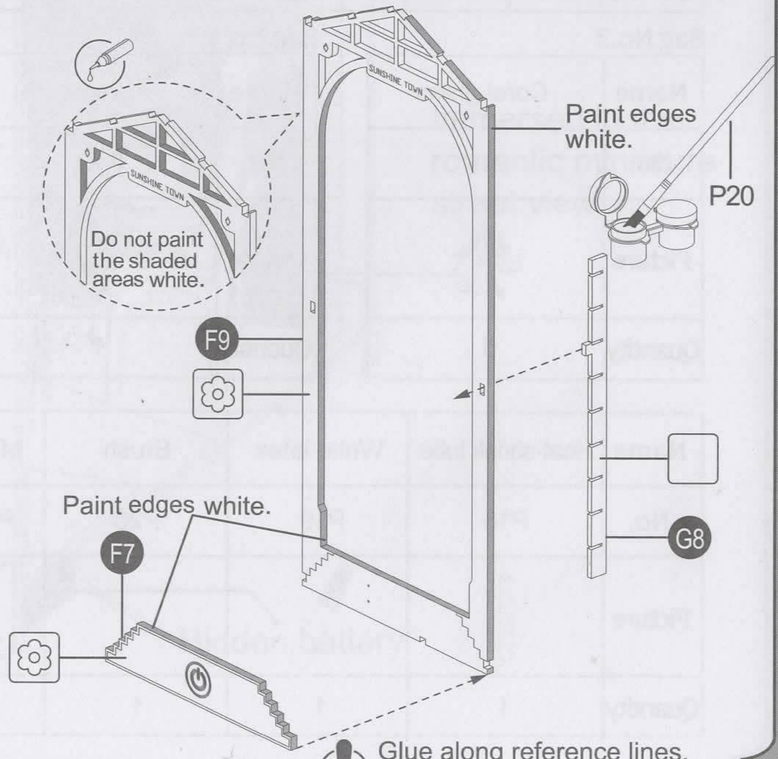

Glue along reference lines. Close the cover of P20 after using.

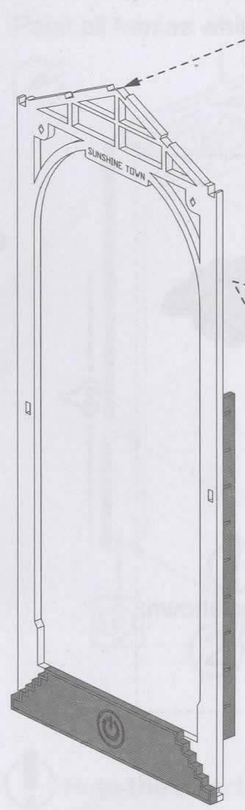

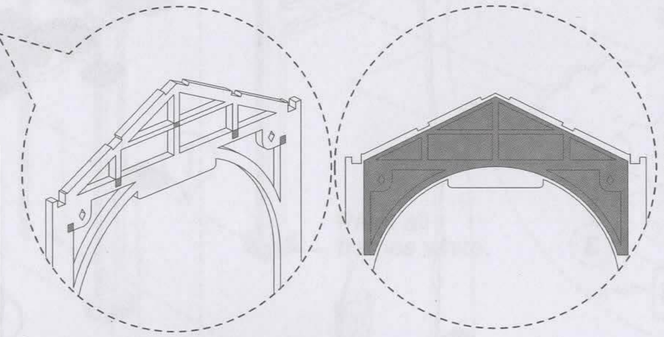

Apply a dab of glue on shaded areas.

Remove the film of J2. It doesn't matter that both sides smoothness are different. **Apply a dab of glue one side of J2 and press 5s.**

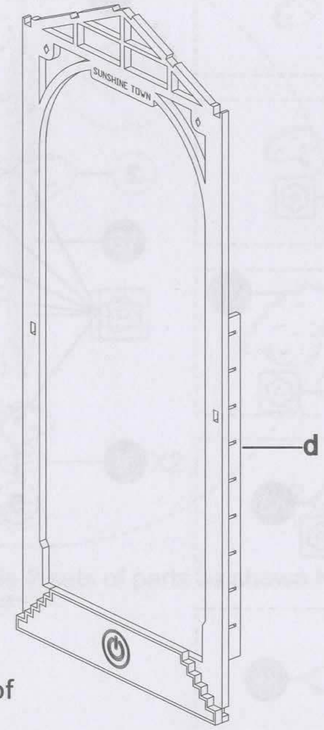

5

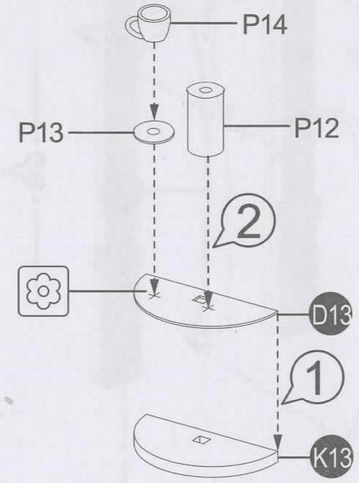

Glue along location marks.

6

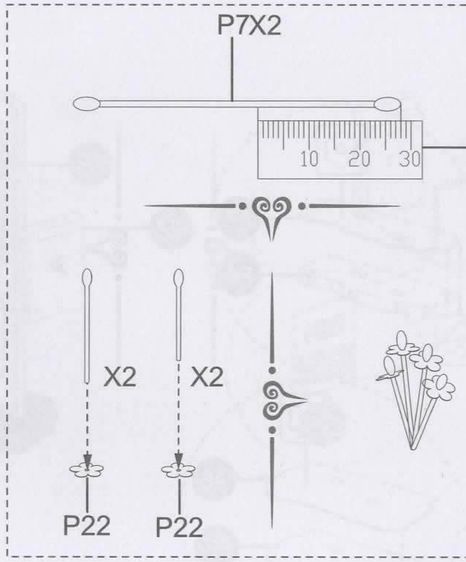

Cut P7 into 2 pieces based on **the length as** shown. Trim flowers' shape at will.

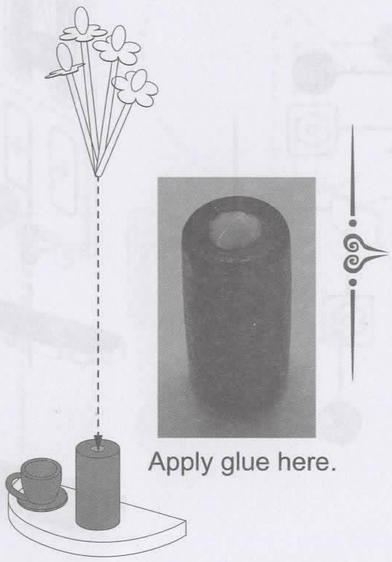

Apply glue here.

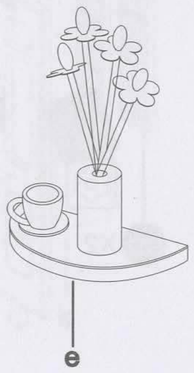

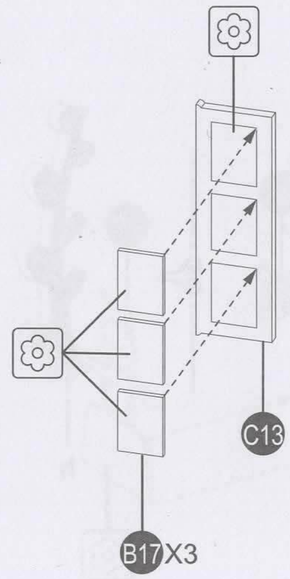

Glue along reference lines.

X2

Assemble 2 **parts** f as shown. Note that do not damage the projections at two ends.

7

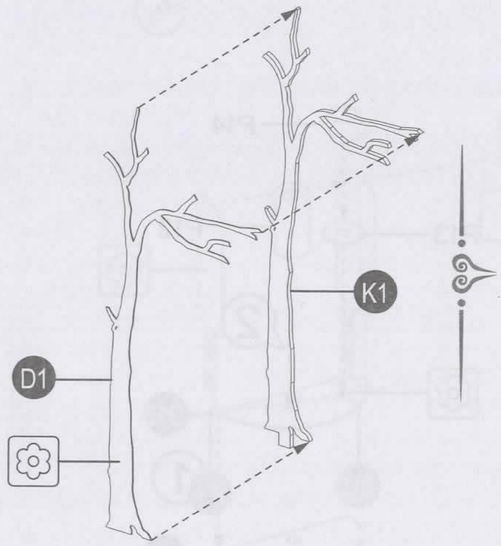

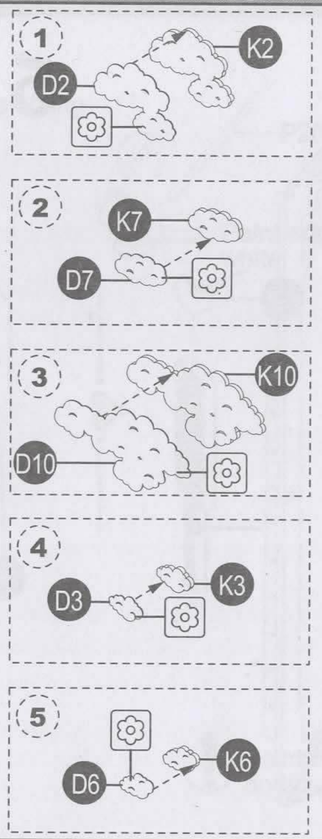

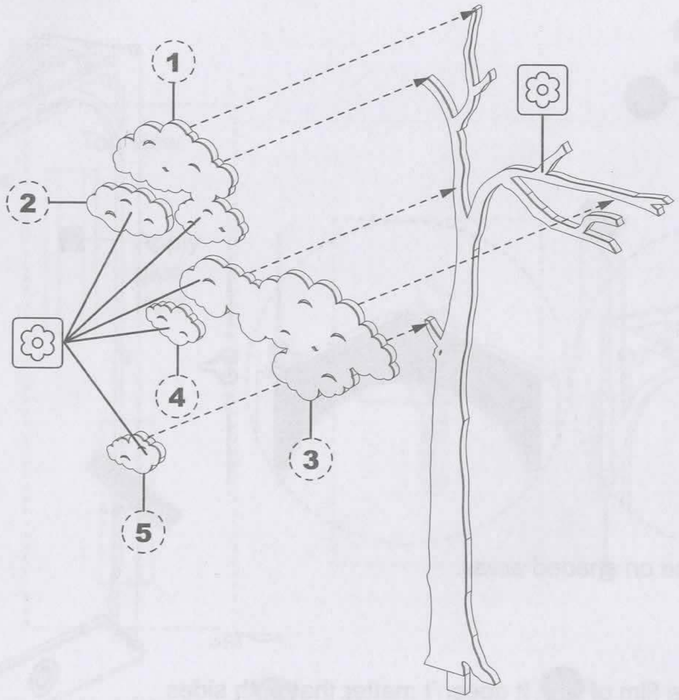

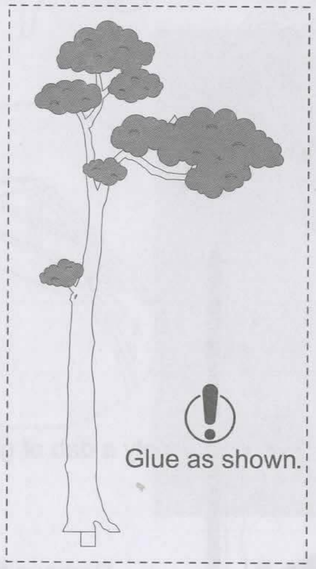

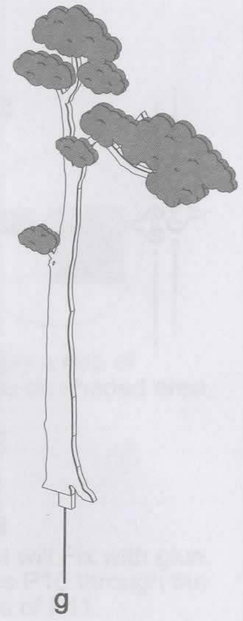

8

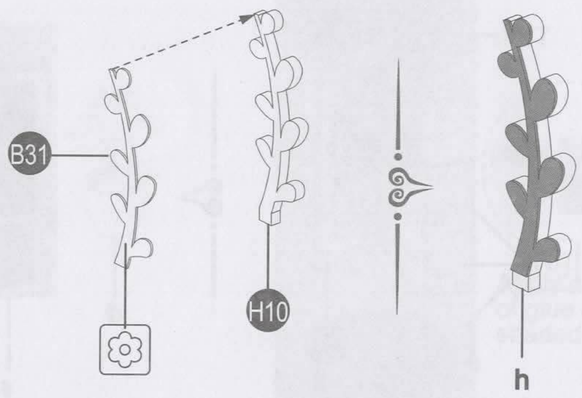

9

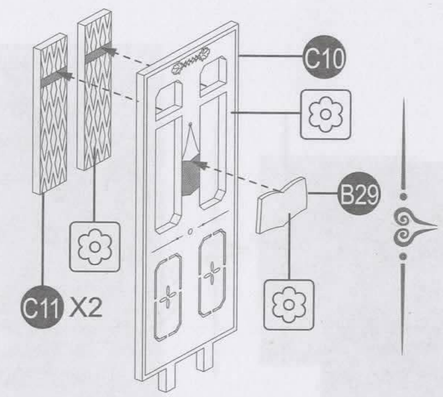

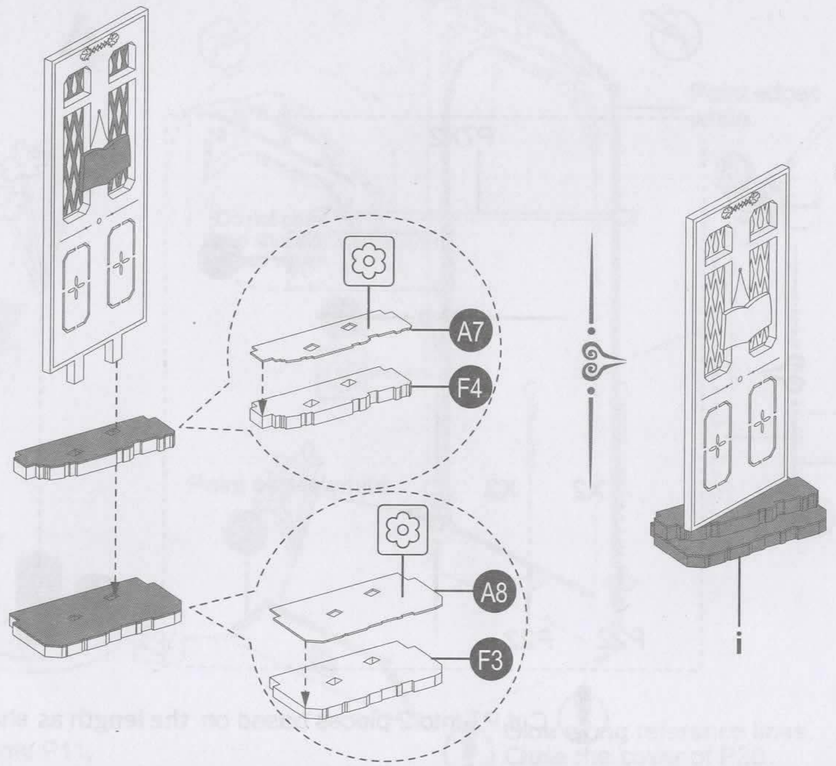

Align shaded areas and glue.

10

Paint all frames white except for the blank areas.

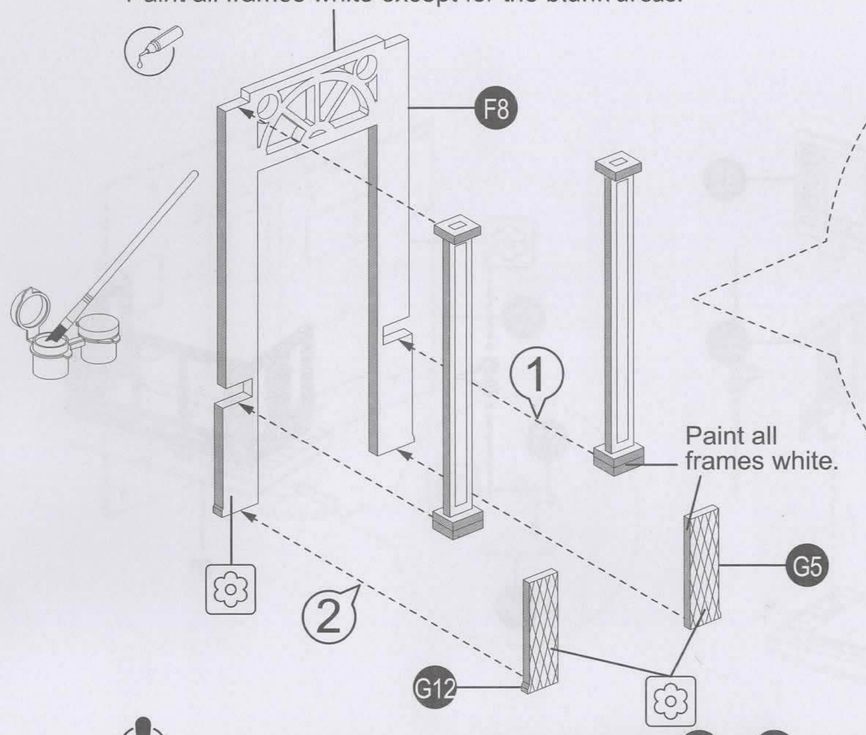

Note the direction of the bottom bulges G5 & G12.

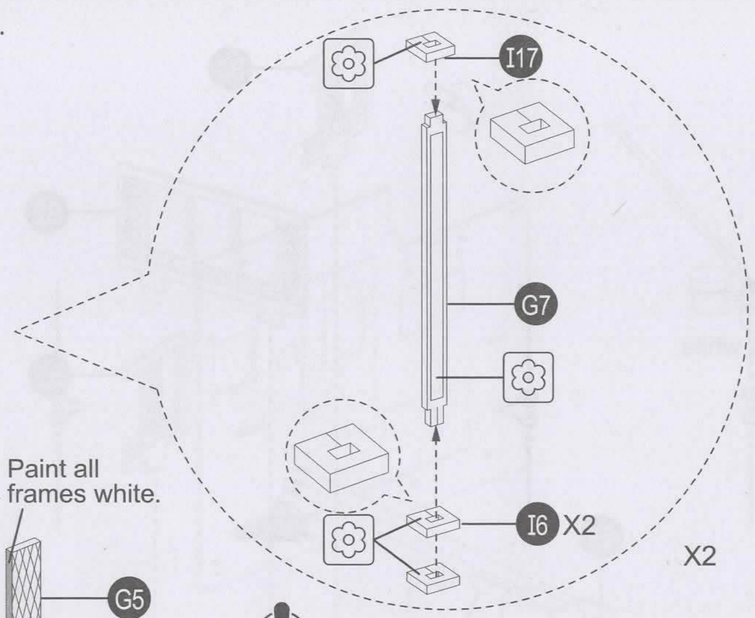

Assemble 2 sets of parts as shown.Note the direction of G7.

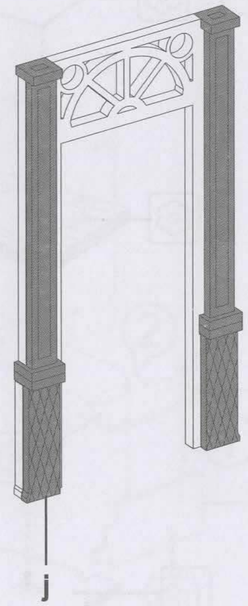

11

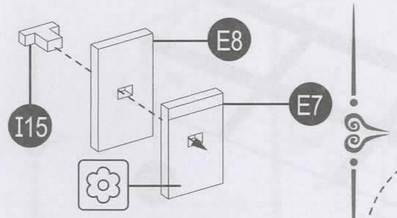

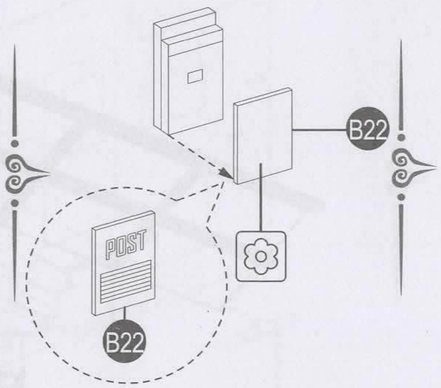

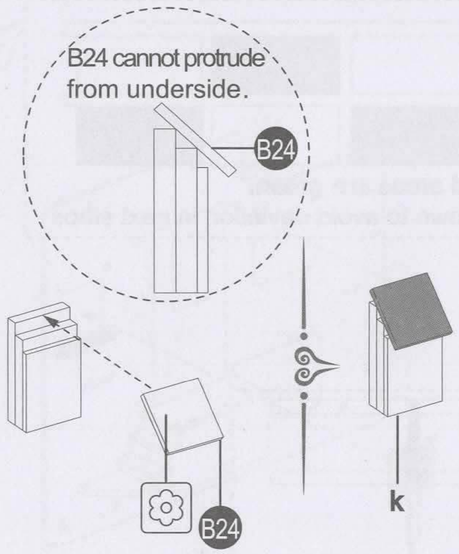

Spare parts for I15.

Glue along reference lines.

Glue on the back of B24.
Note the paste position.

12

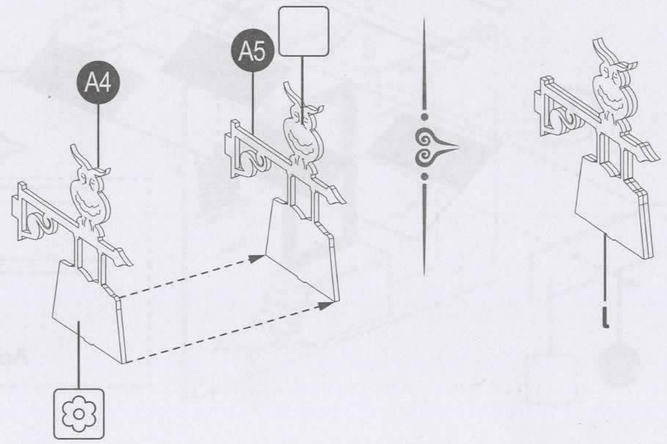

Apply a dab of glue to avoid the glue overflowing.

13

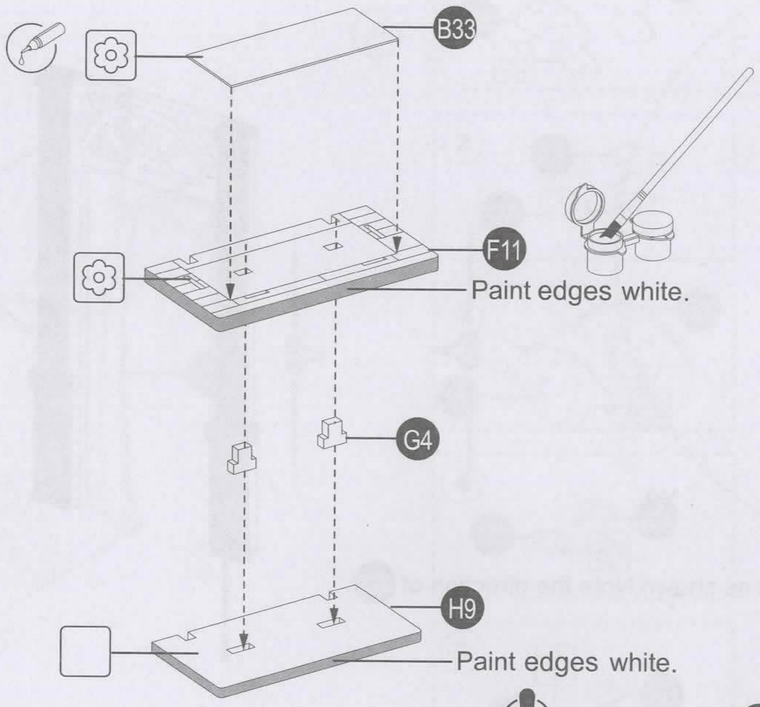

Spare parts for G4.

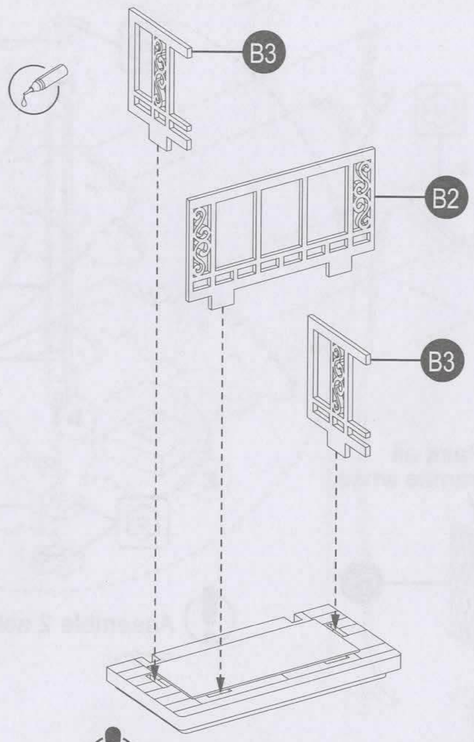

Apply a dab of glue on junctions to fix the parts.

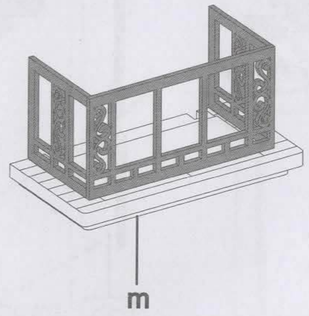

14

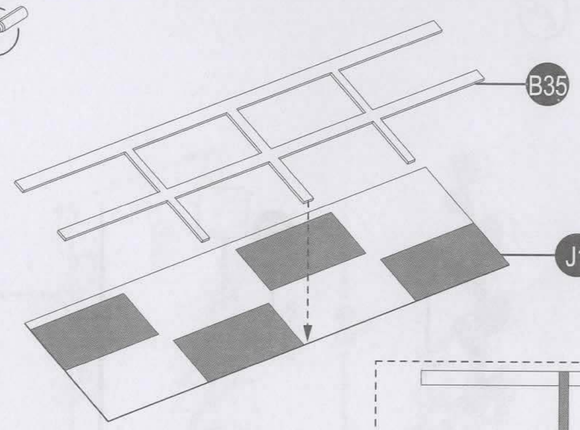

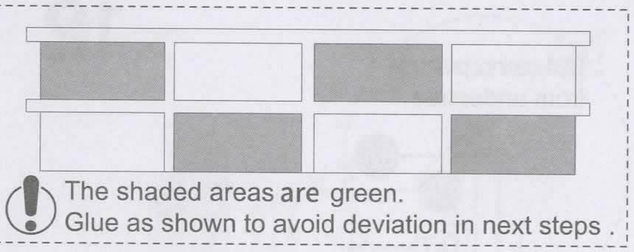

The shaded areas are green.
Glue as shown to avoid deviation in next steps .

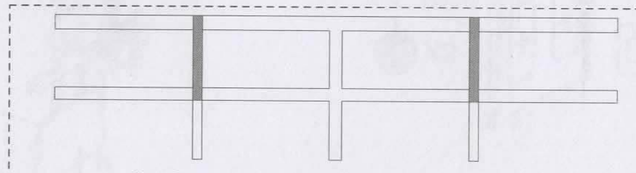

Apply a dab of glue on shaded area.

Remove the film before using J1.

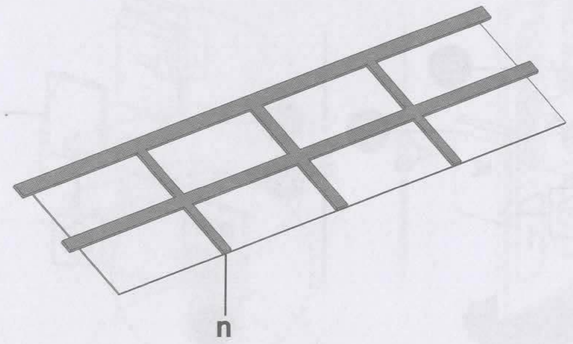

X2

Assemble 2 parts n as shown.

15

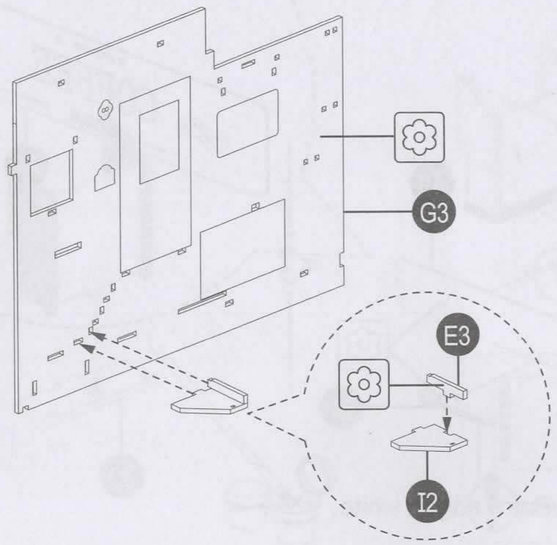

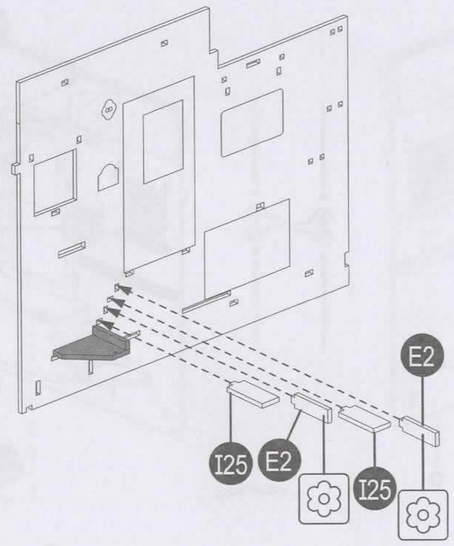

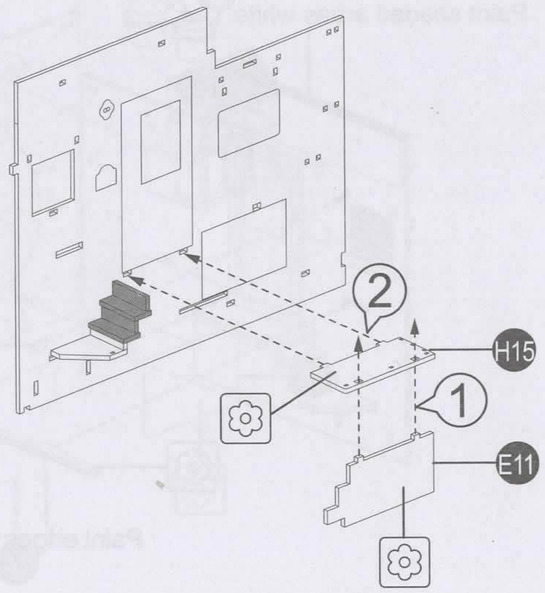

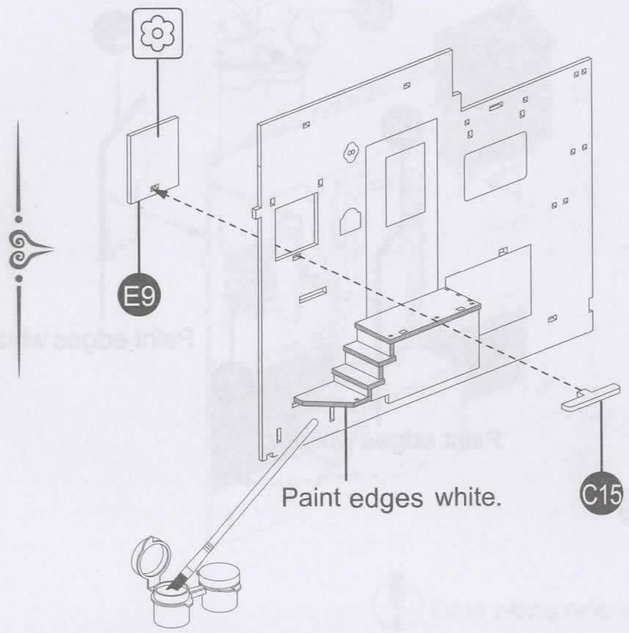

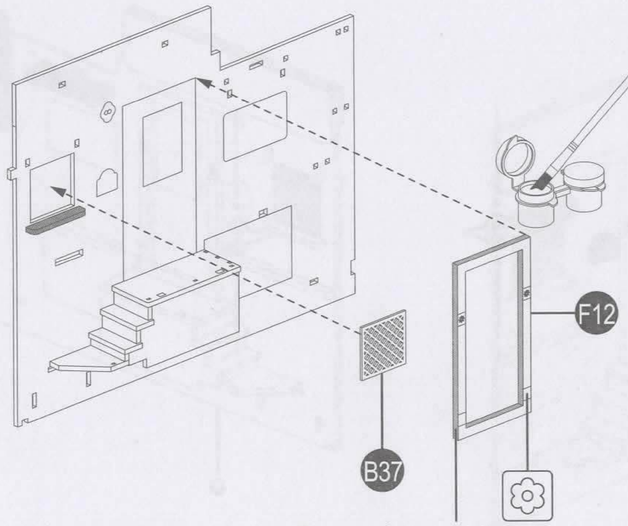

Paint inside and outside frames of F12 white. Apply a dab of glue and press 5s.

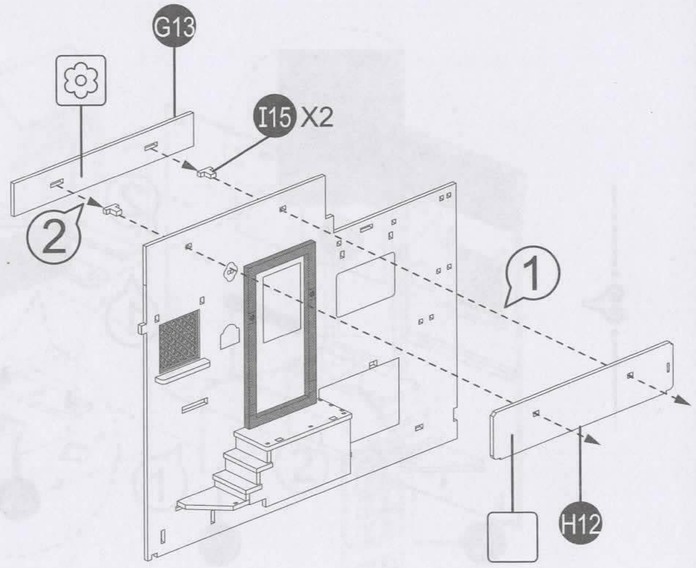

Spare parts for I15.

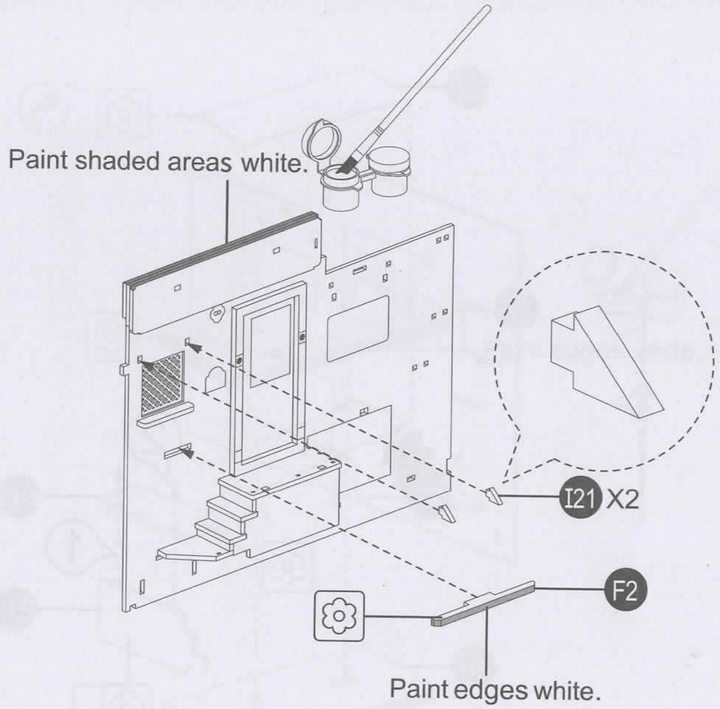

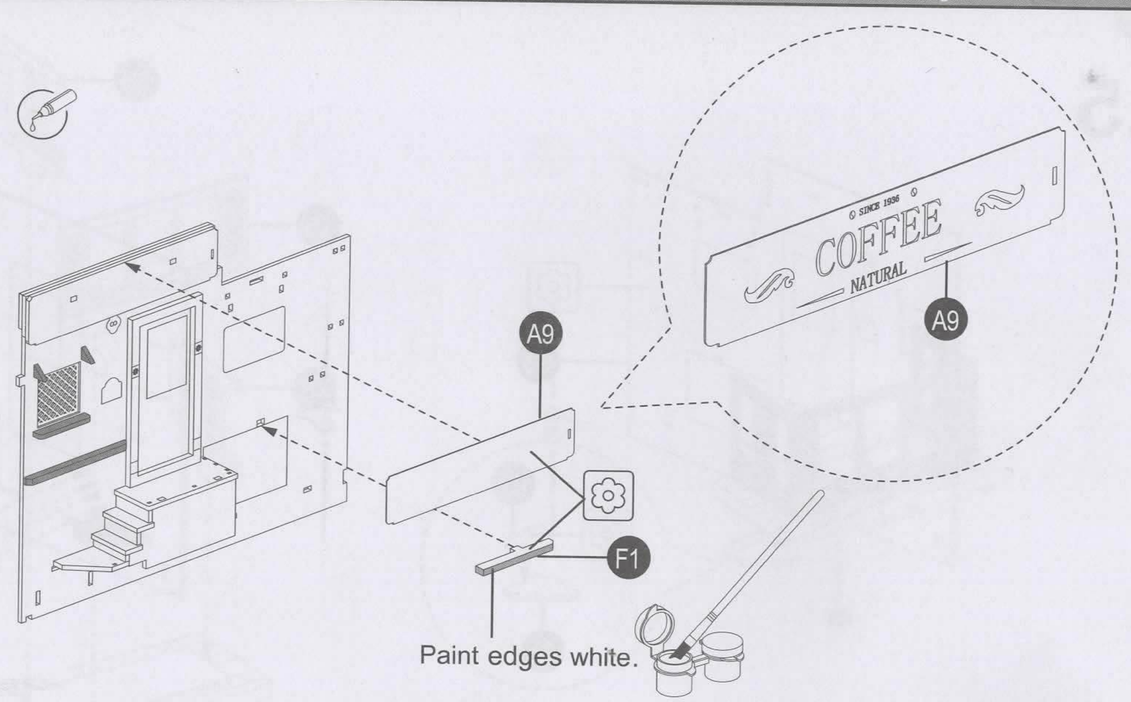

Apply a dab of glue and press 5s.

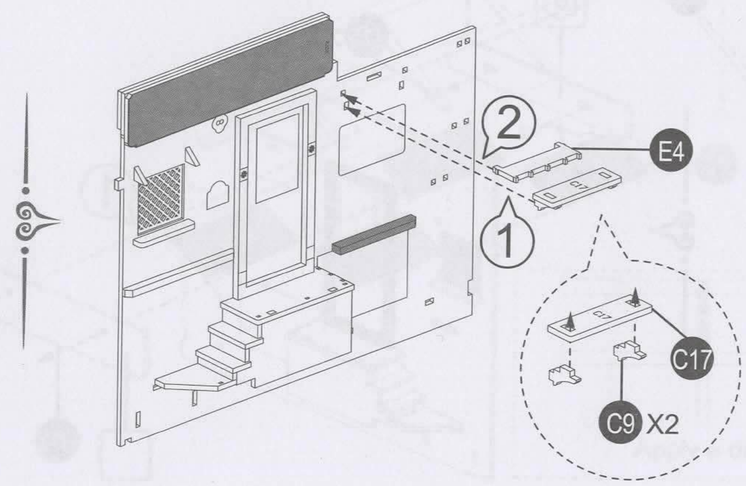

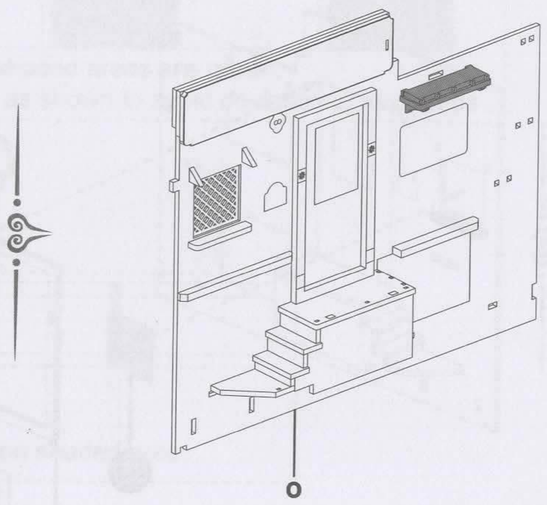

16

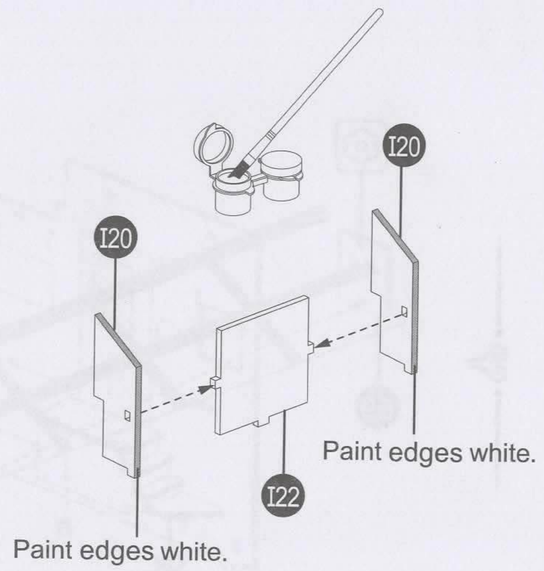

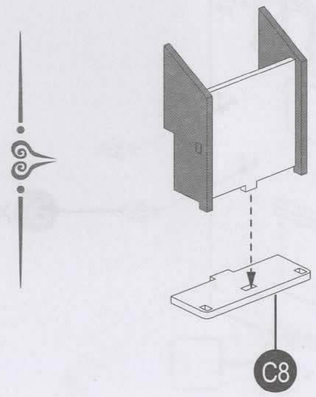

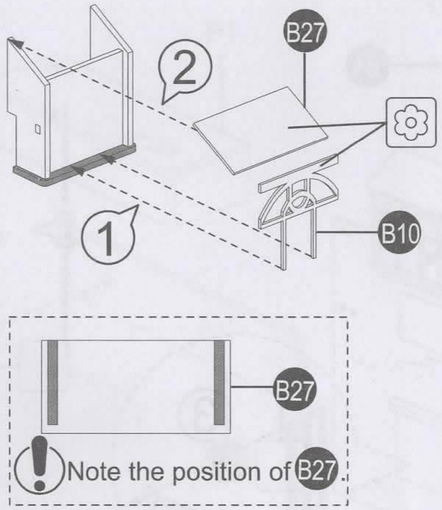

Apply a dab of glue on the back of B10.

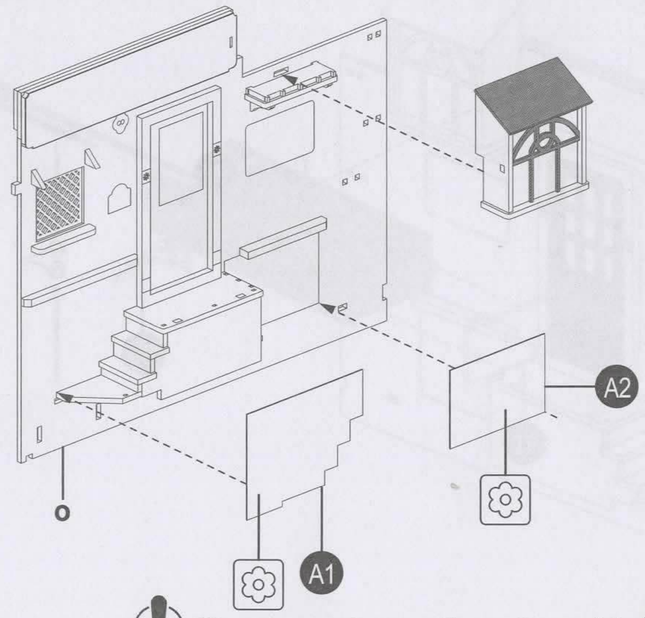

Glue along reference lines. **Assemble A1 as shown and fix with glue.**

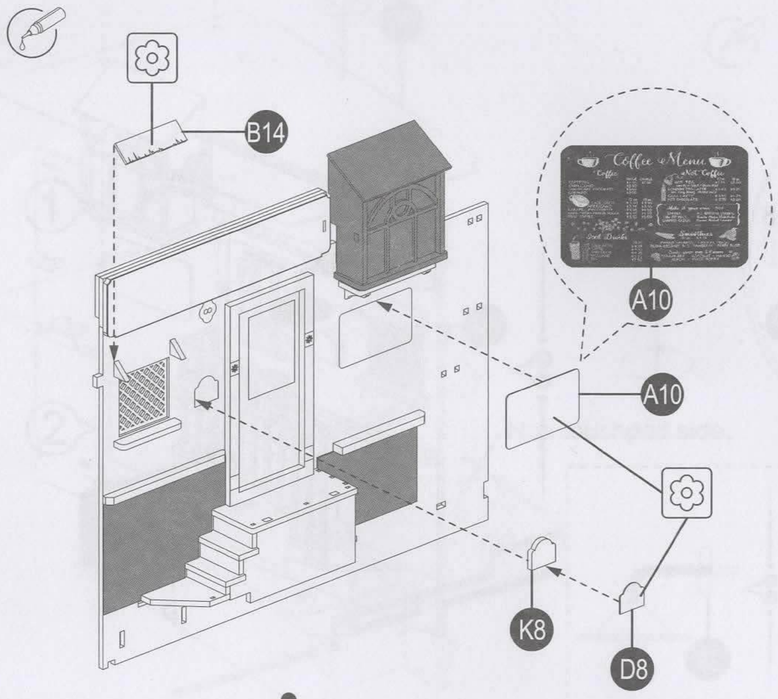

Glue along reference lines.

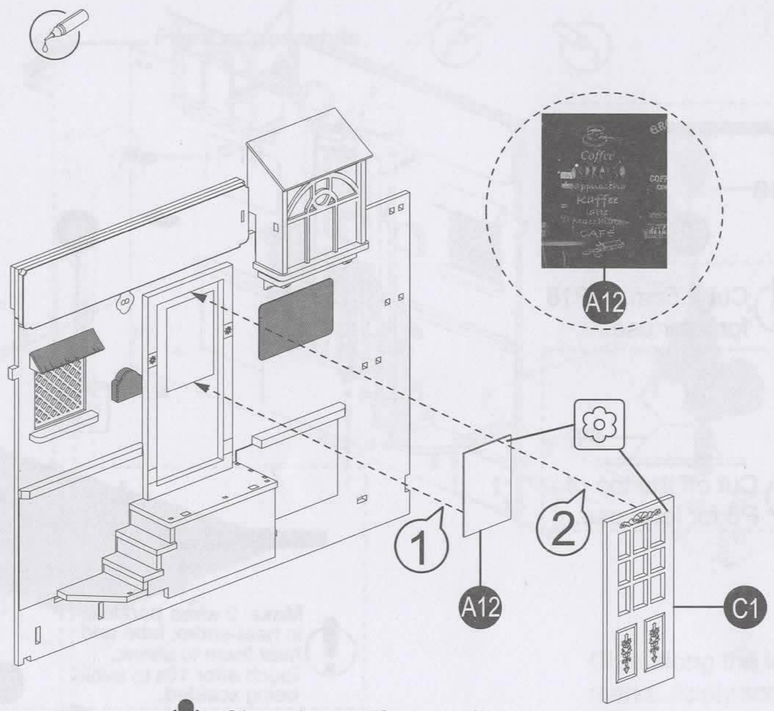

Glue along reference lines.
Apply a dab of glue on the back of C1 while assembling.

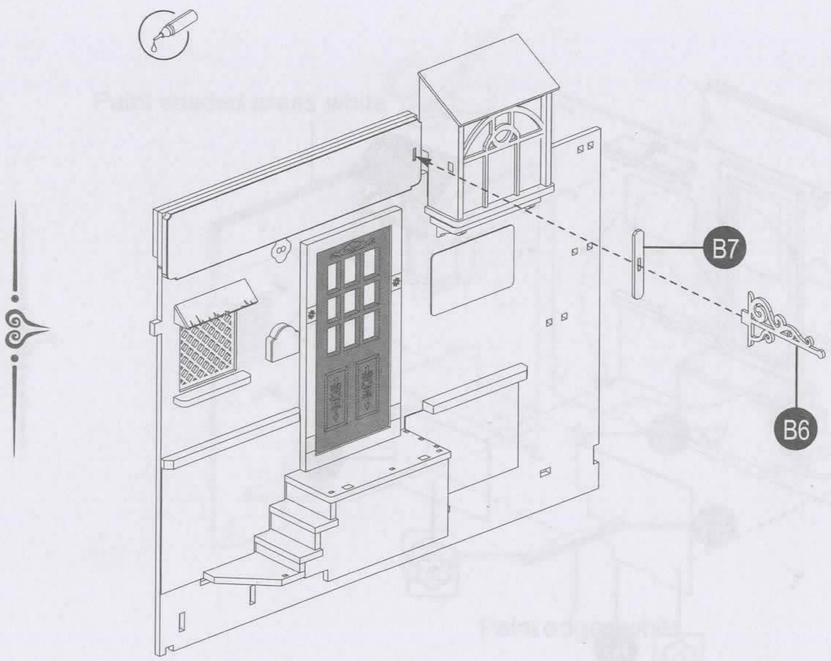

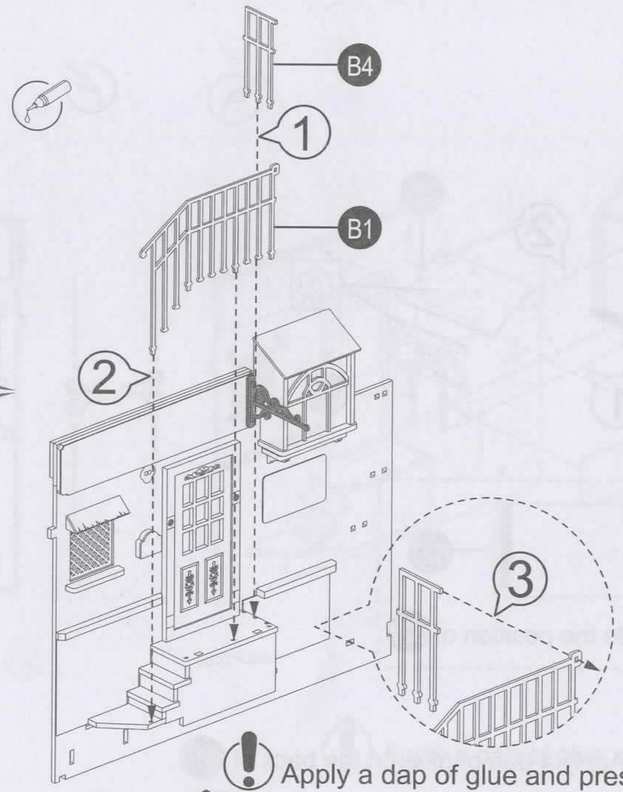

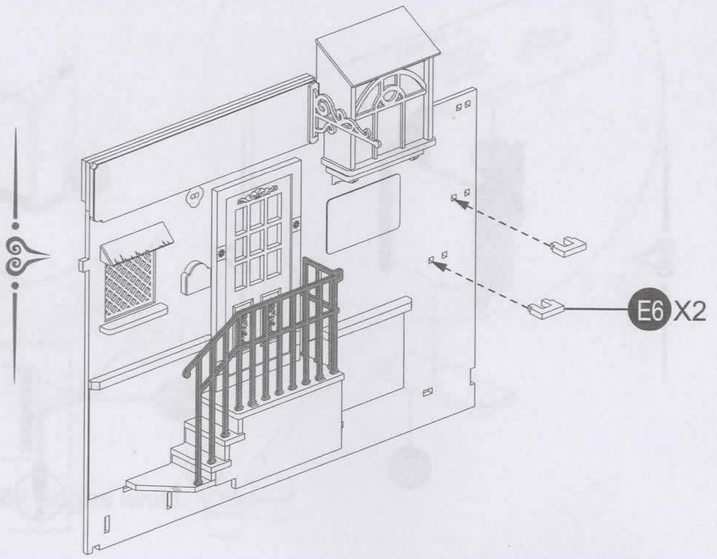

Apply a dap of glue and press 5s to dry.

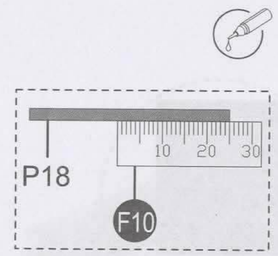

Cut 2.5cm of P18 for later use.

Cut off the top of P6 for later use.

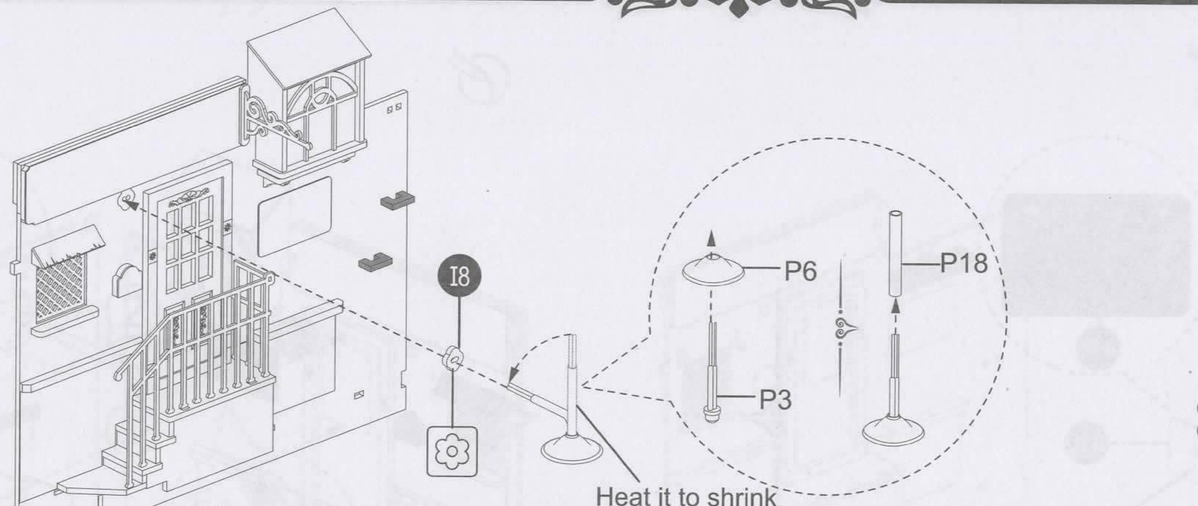

Heat it to shrink.

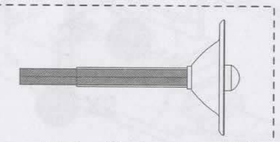

Make 2 wires parallel in heat-shrink tube and heat them to shrink. Touch after 10s to avoid being scalded.

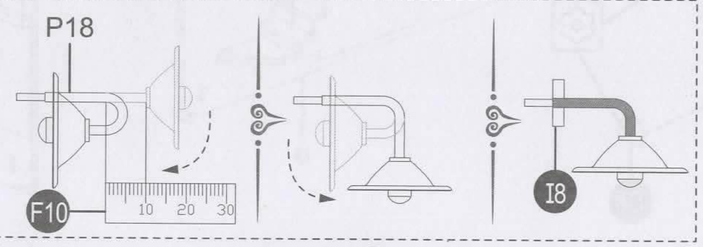

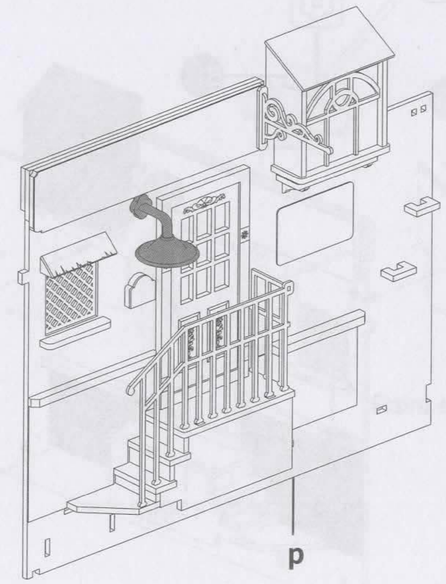

Heat it to shrink and bend as shown. Put I8 onto the heat-shrink tube as shown. (The end of the tube is flush with the surface of I8). Bend as shown length and in this angle for better appearance.

17

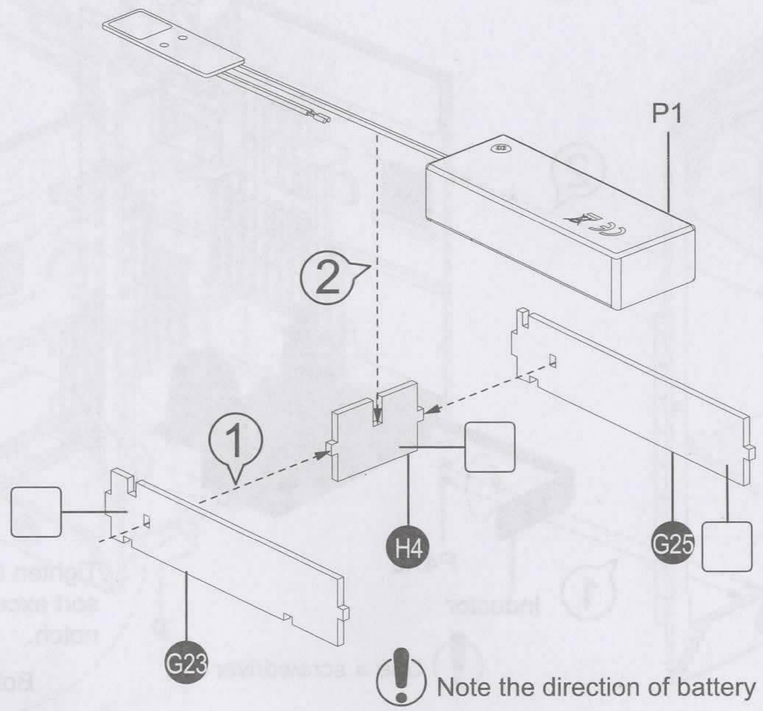

Note the direction of battery box.

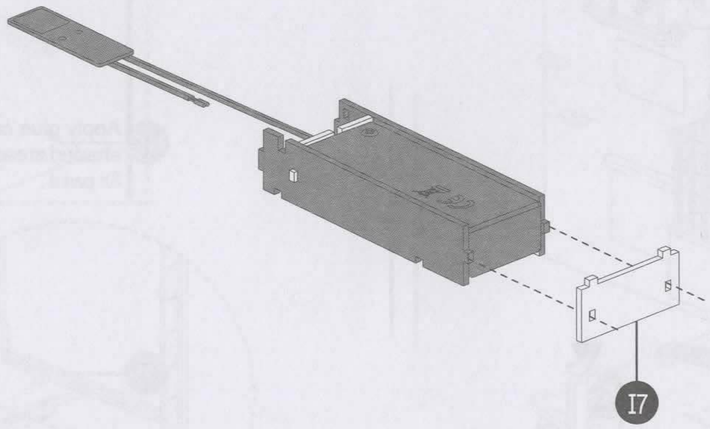

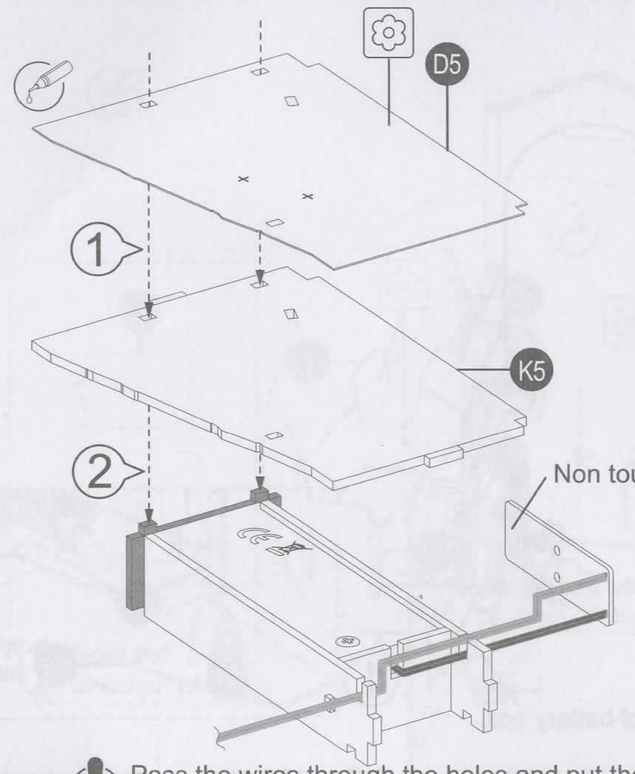

Pass the wires through the holes and put them into the notch.
Note the direction of the touchpad.

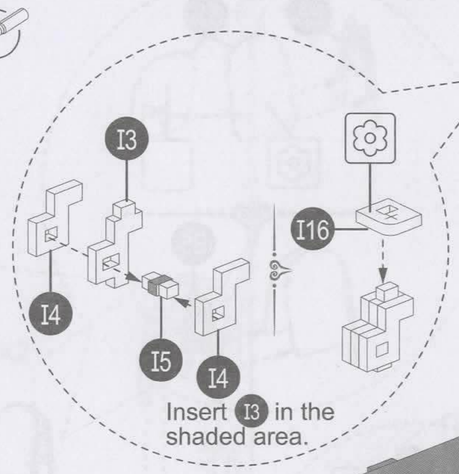

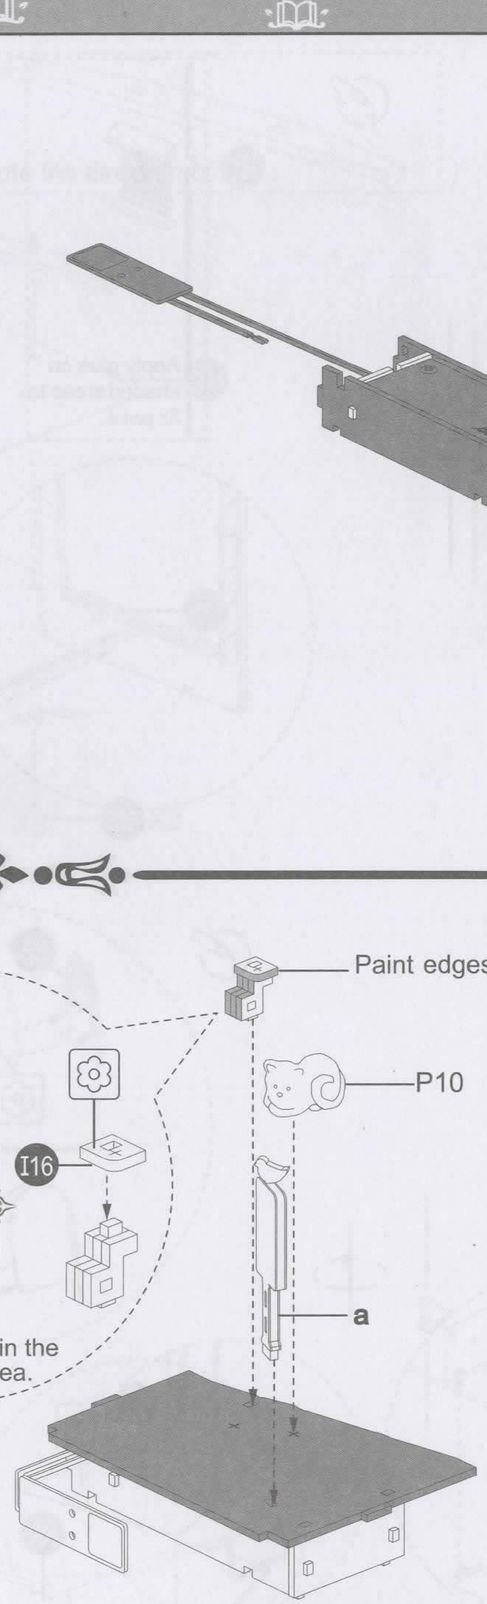

I5 has spare parts. Glue I5 along location marks.
Assemble **in the** same angle of P10 as shown

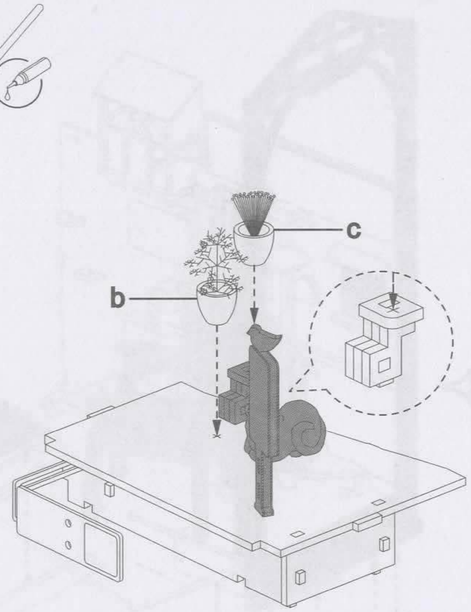

Glue along the location marks. Apply some glue on the bottom and wait until it gets dried.

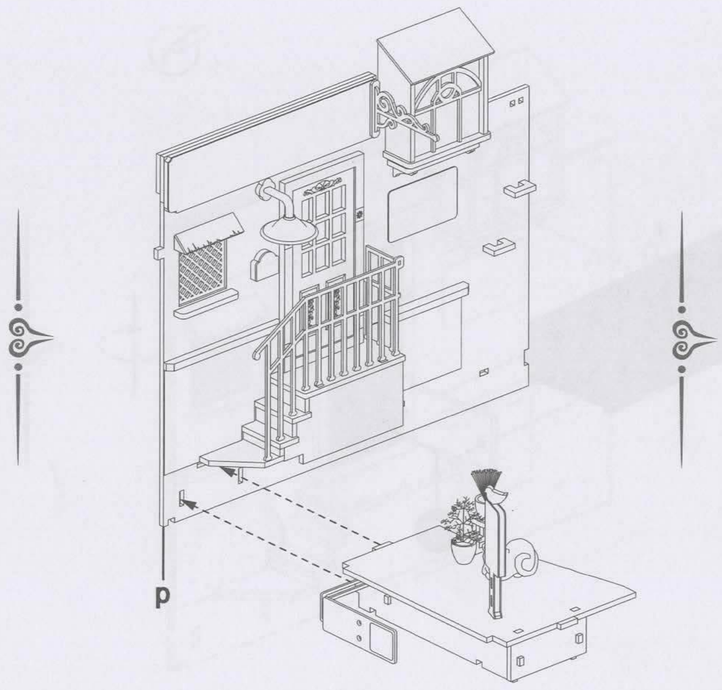

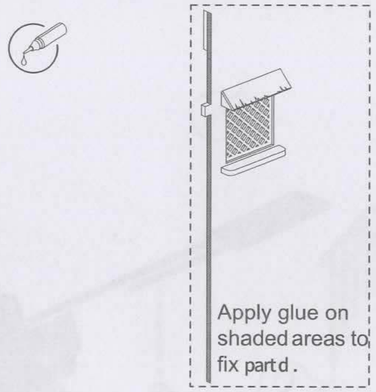

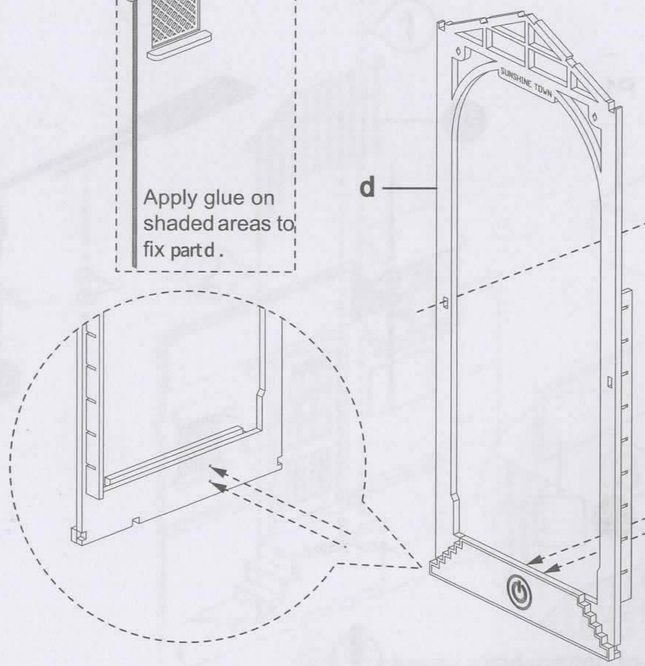

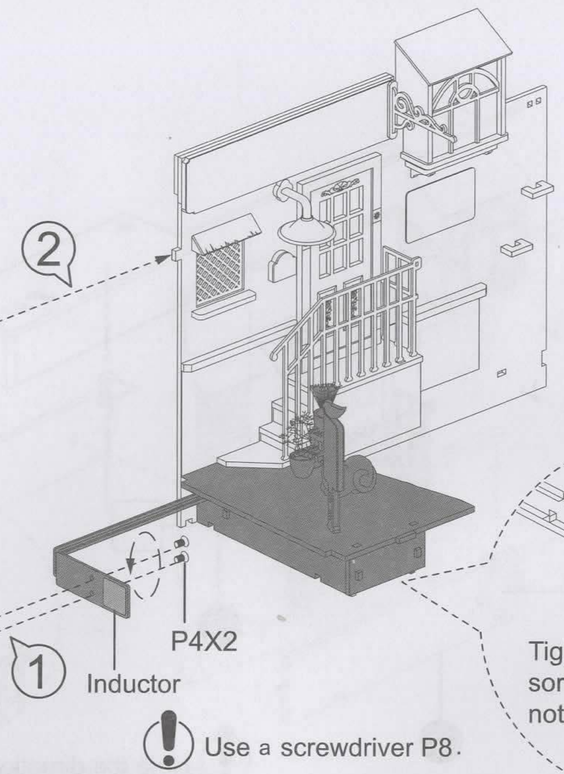

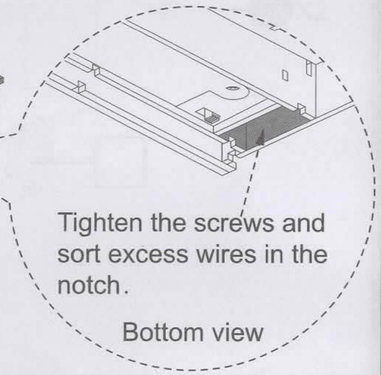

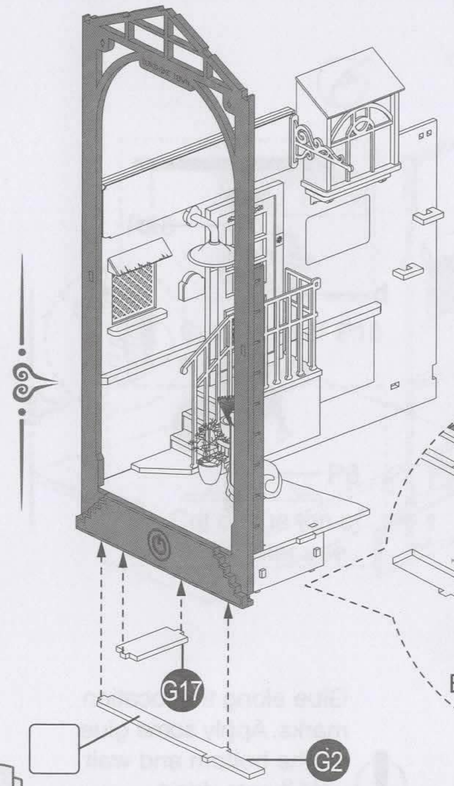

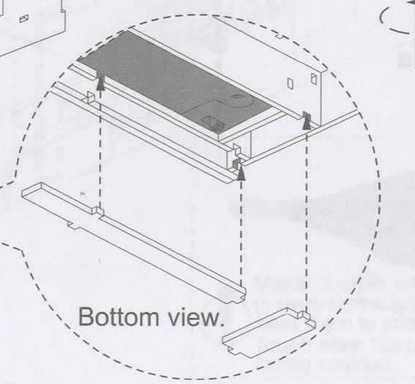

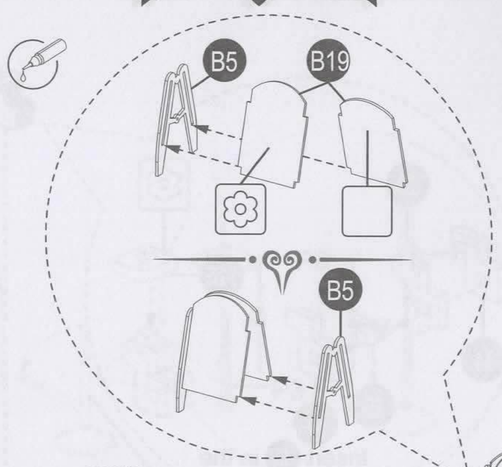

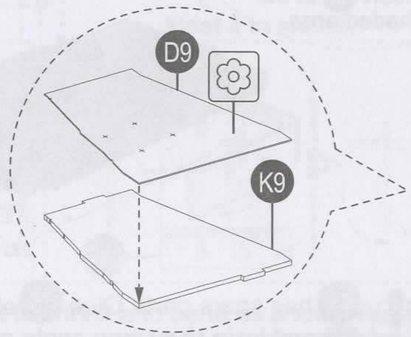

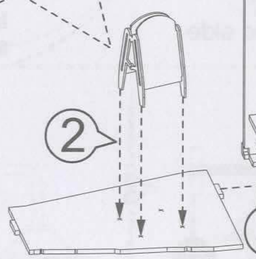

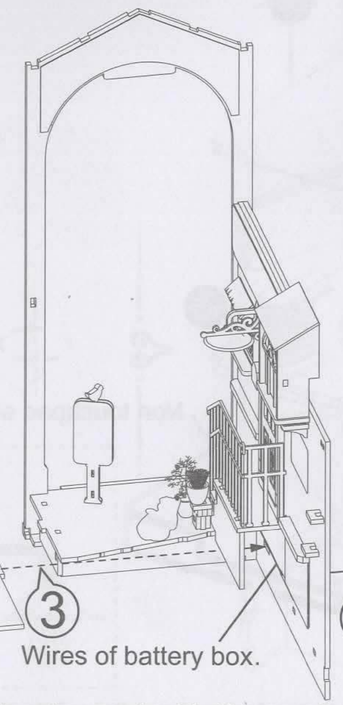

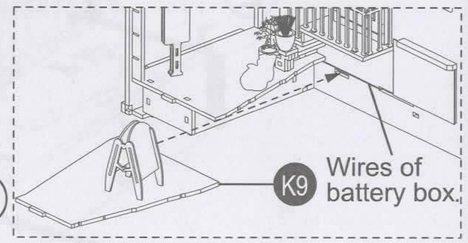

Glue along location marks. Firstly, pass the wires through the holes as shown. Then assemble K9. K9 is below the wires.

18

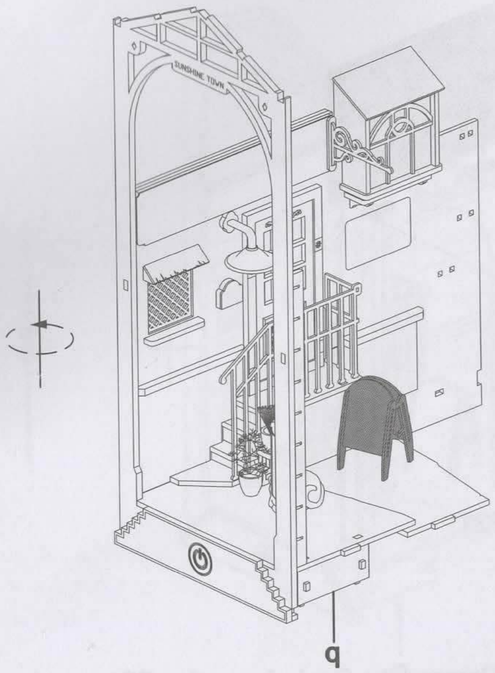

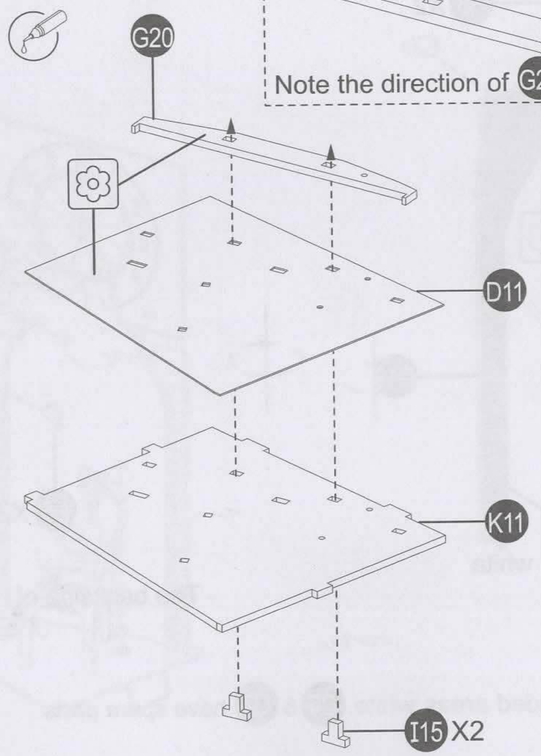

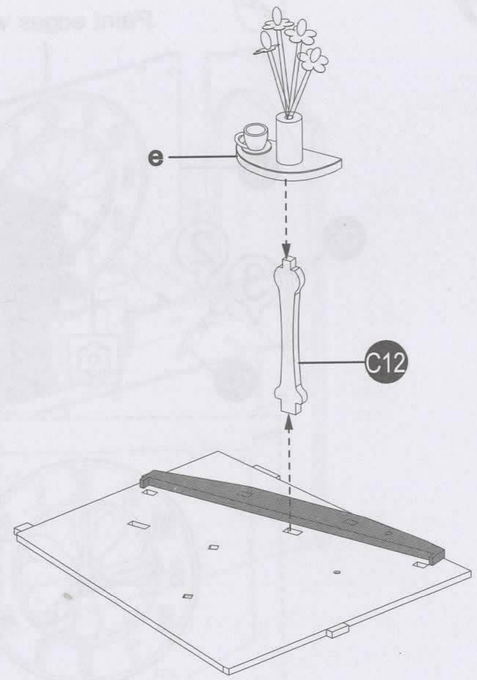

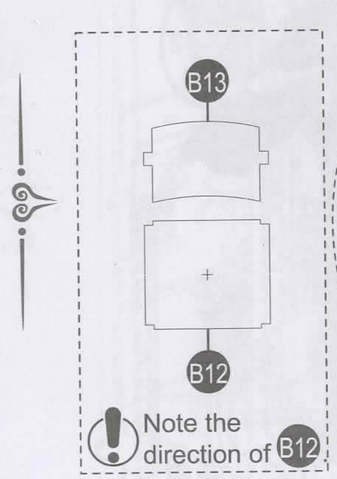

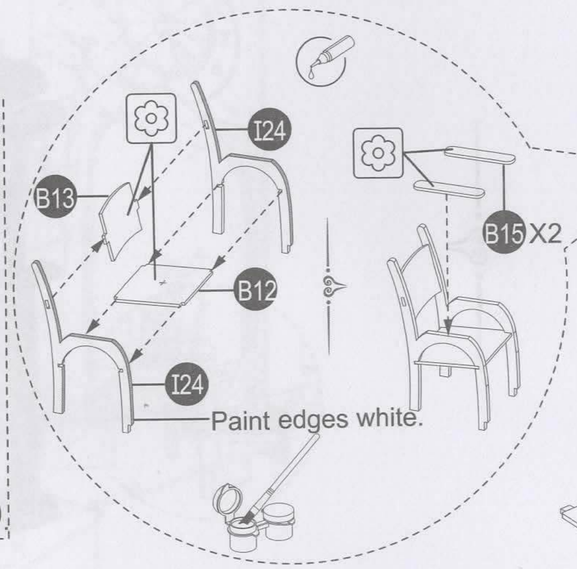

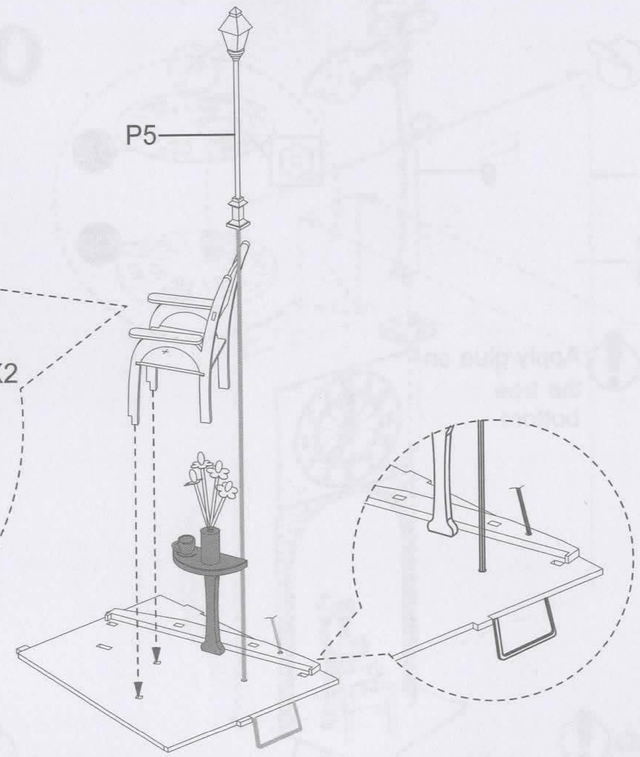

Paint all frames of I24 white. Pass wires of P5 through the holes as shown. Then apply glue on its bottom and press 5s to fix it.

19

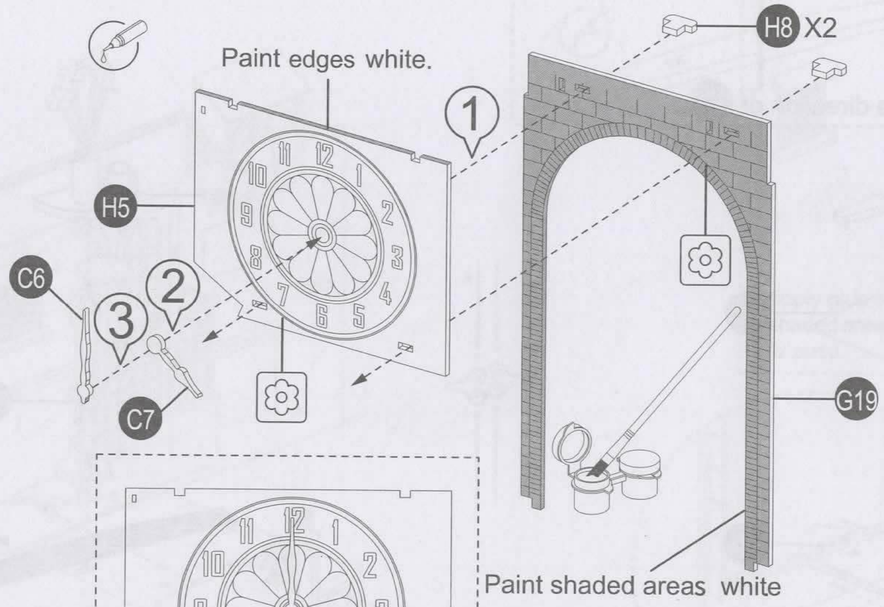

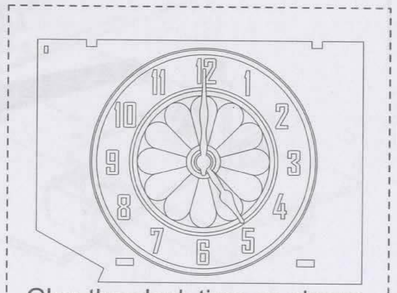

Only paint shaded areas white. C6 & C7 have spare parts.

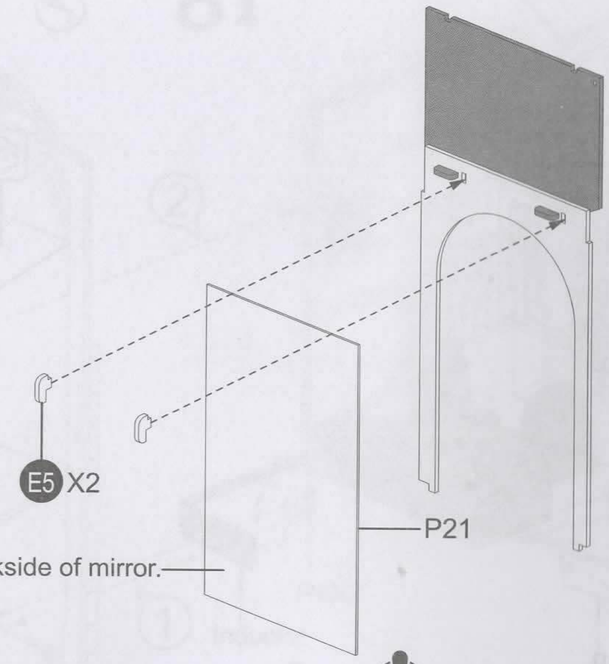

Remove the film before using P21.

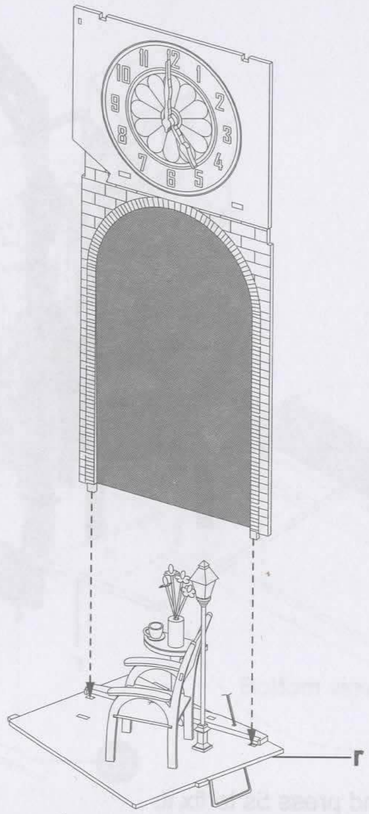

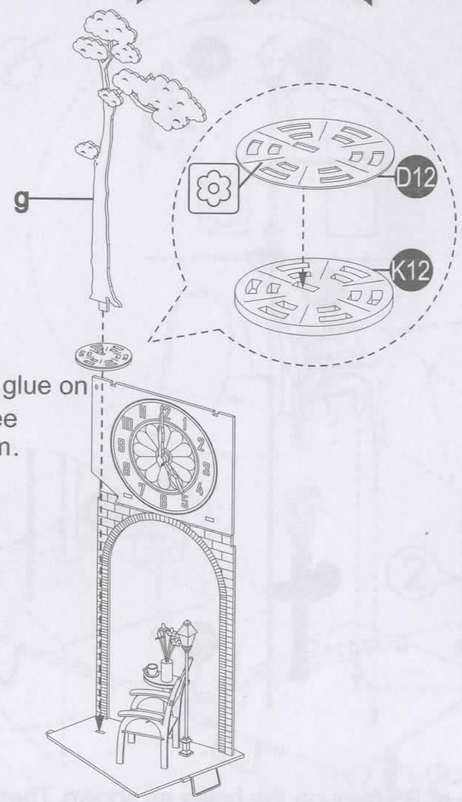

Apply glue on the tree bottom.

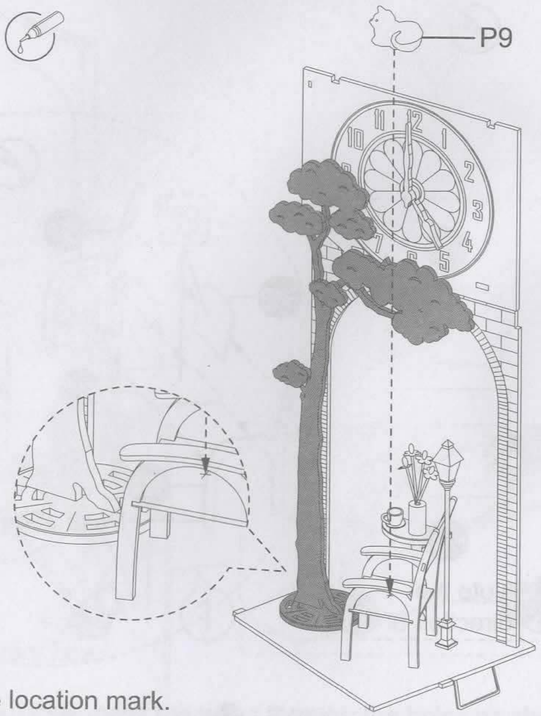

Glue along the location mark.
Assemble in the same angle based on the mark.Press 5s after gluing.

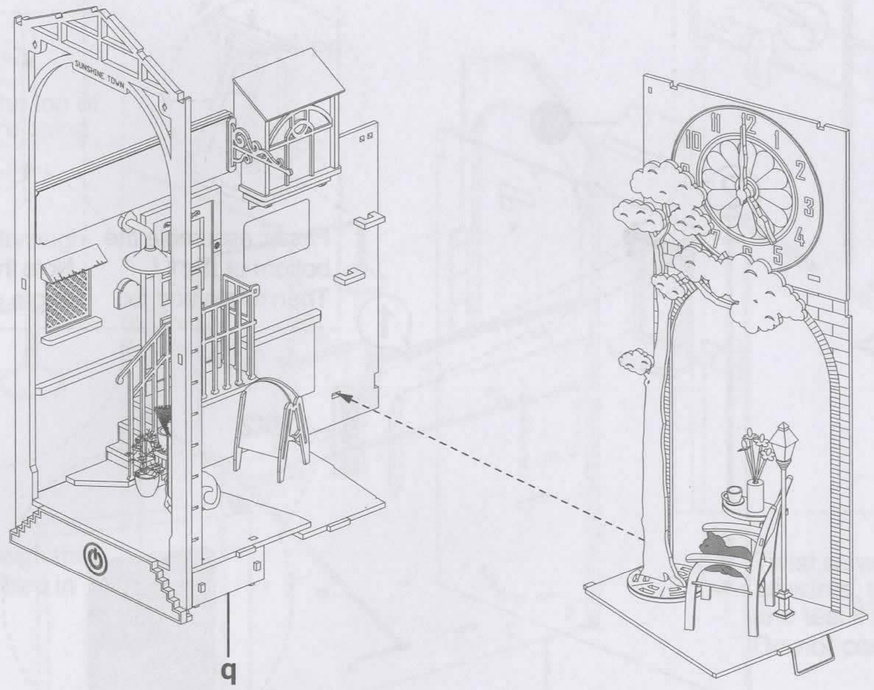

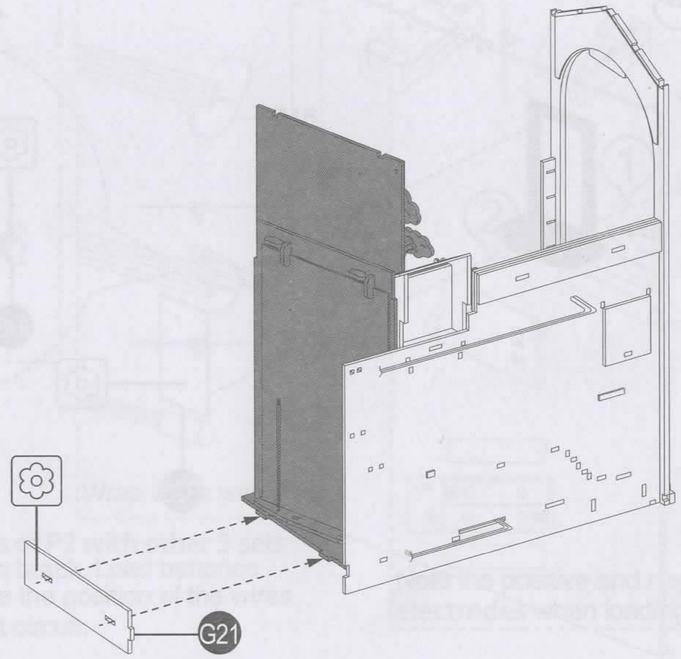

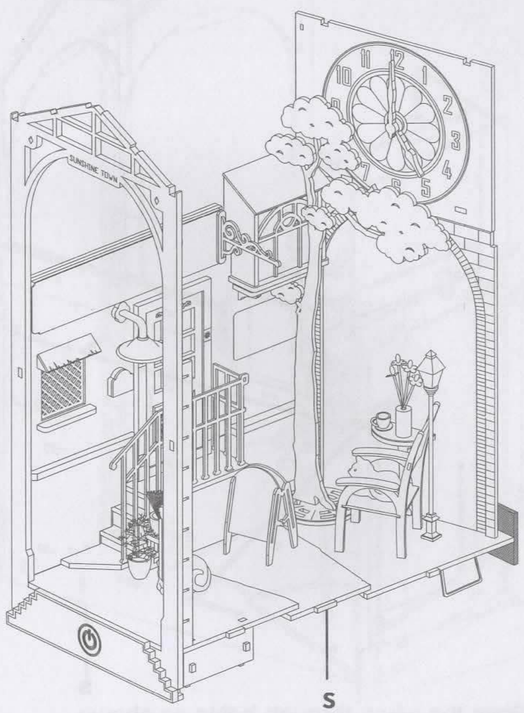

20

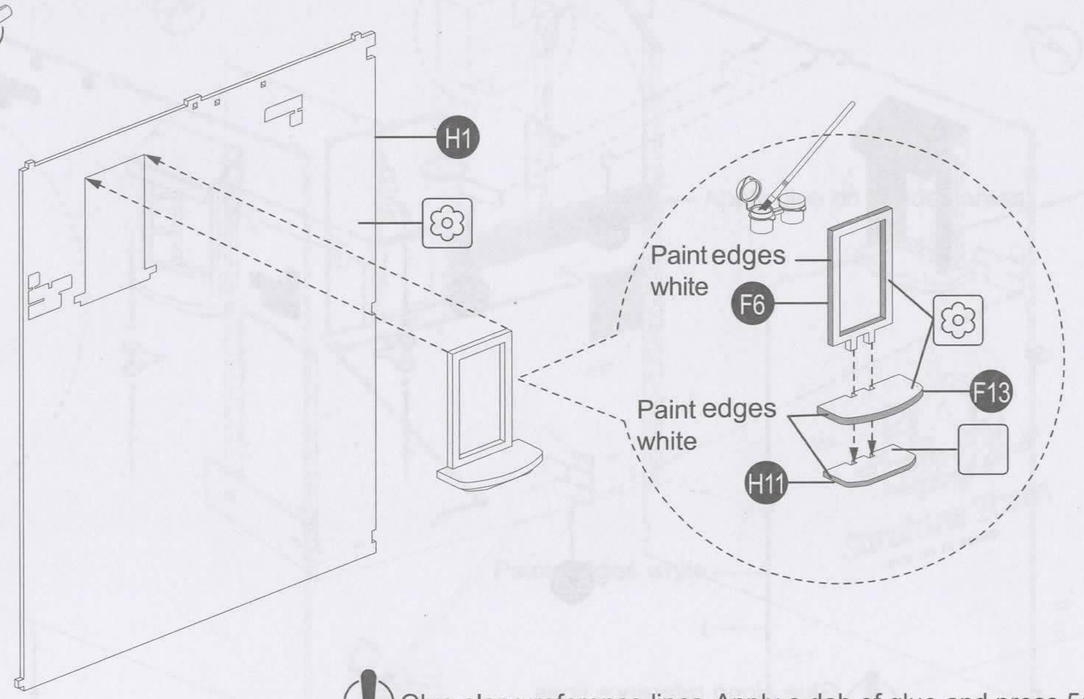

Glue along reference lines. Apply a dab of glue and press 5s.

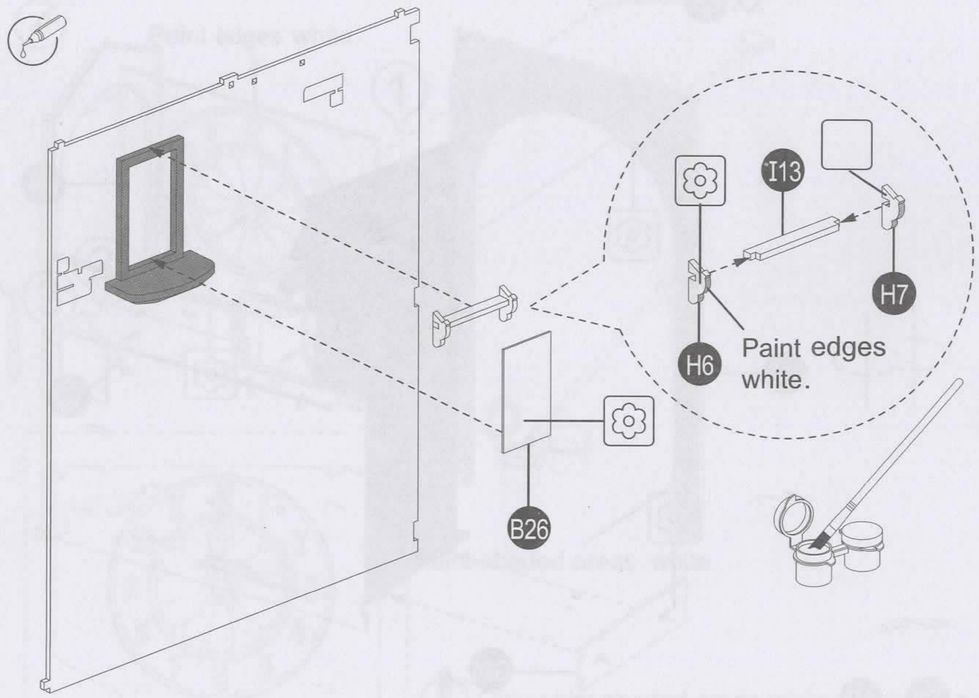

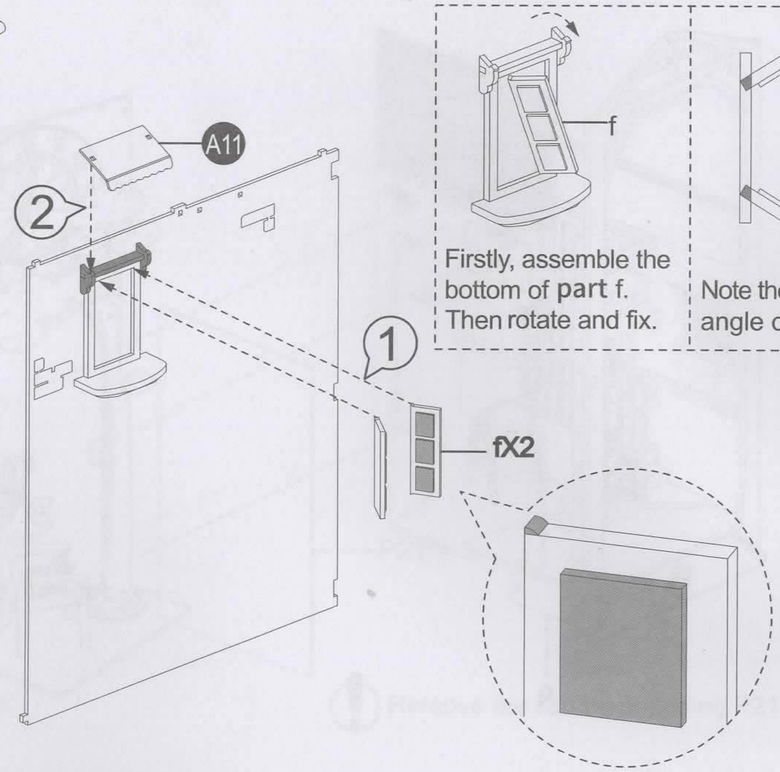

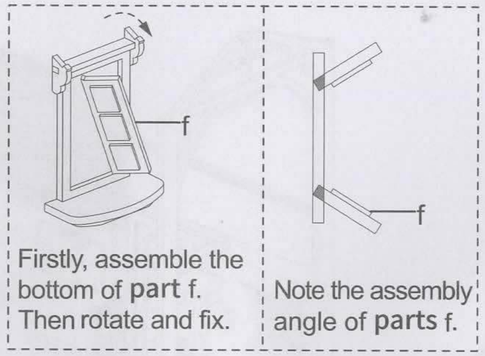

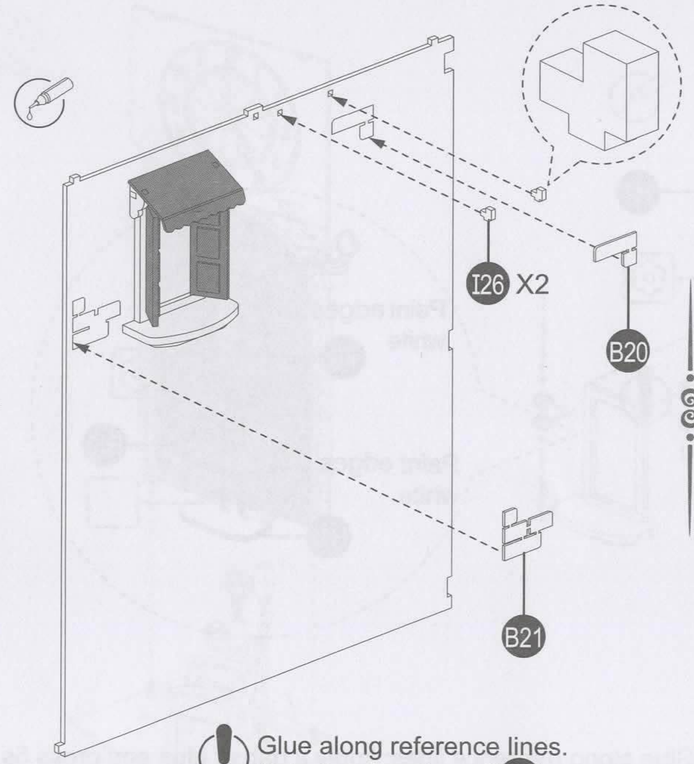

Glue along reference lines.
Note the direction of I26.

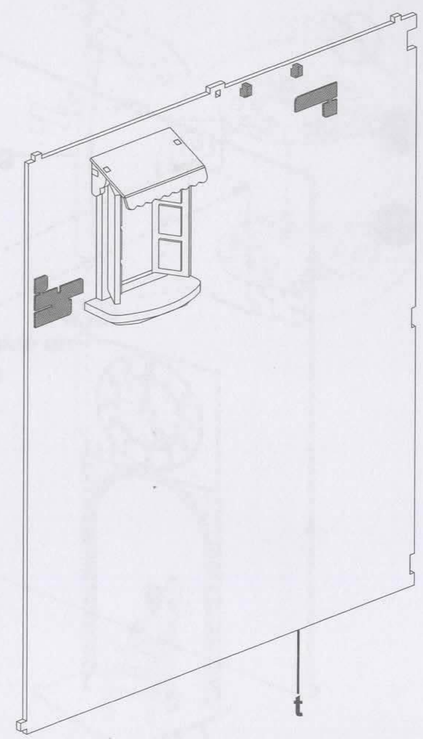

21

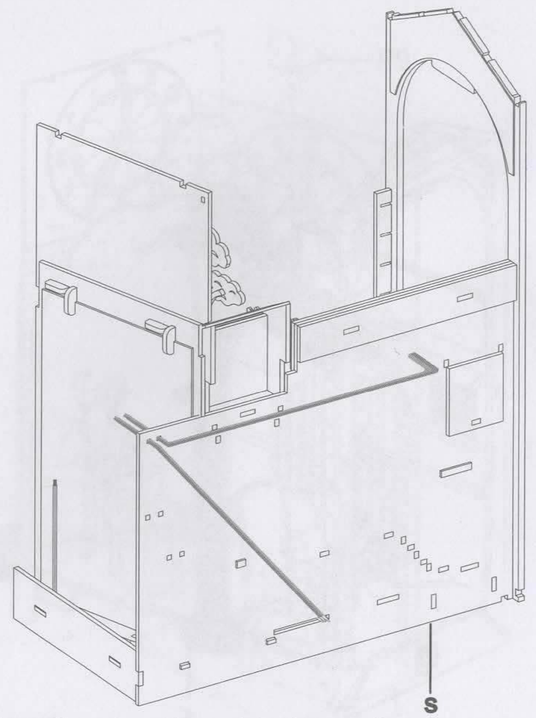

Pass the wires through holes as shown.
Then glue tightly on the board.

1

Cut off the top of P6 before using.

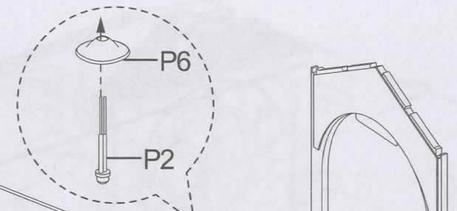

Pass wires through the hole.

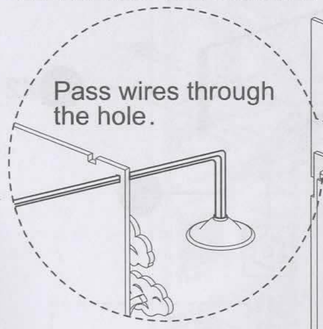

Pass the wire through the hole only. It'll be fixed in later steps.

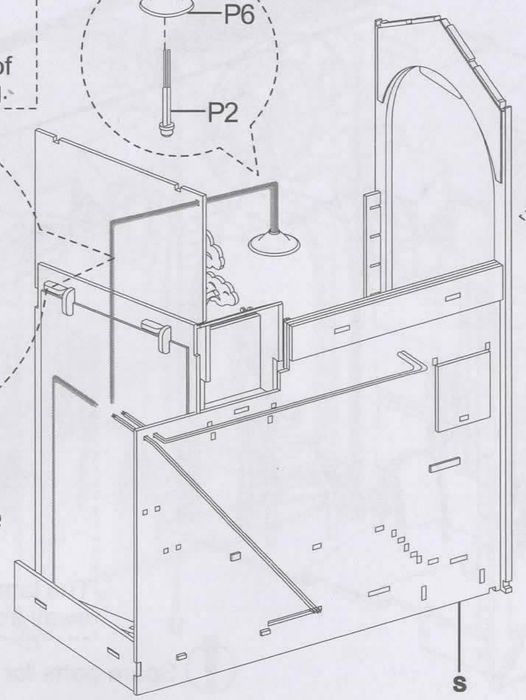

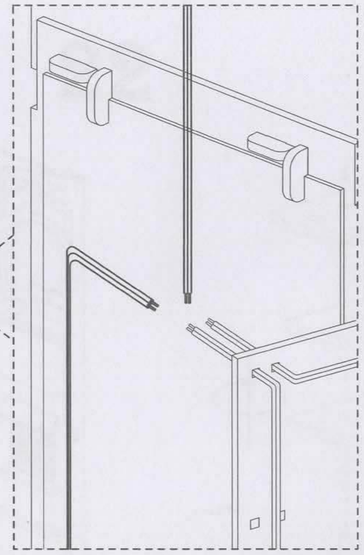

2

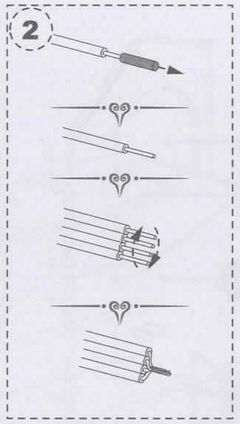

3

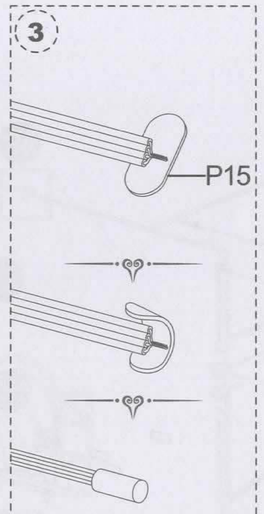

Wrap wires with P15.

Twist same color wires. **Connect wires of P2 with other 3 sets of wires, yellow with red, white with black**. Load batteries and test if the light works properly. Note the position of the wires. Do not connect 2 wires to avoid short circuit.

4

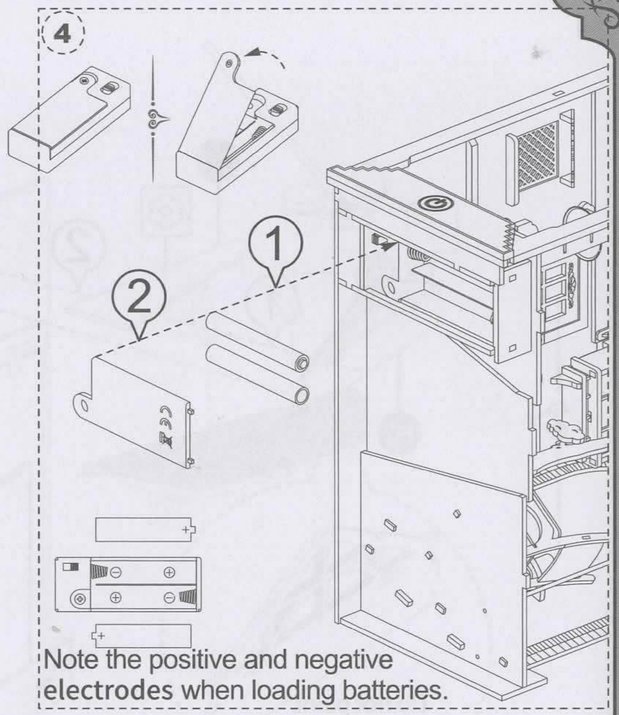

Note the positive and negative **electrodes** when loading batteries.

Tighten the cover after loading batteries.

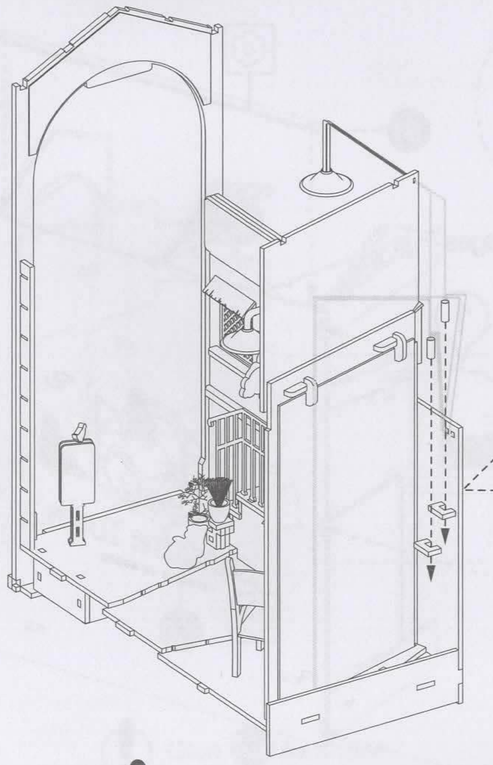

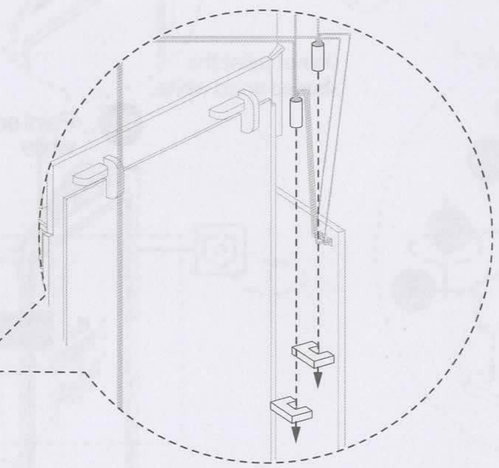

Pass the wrapped wires through the spacing hole to avoid short circuit.

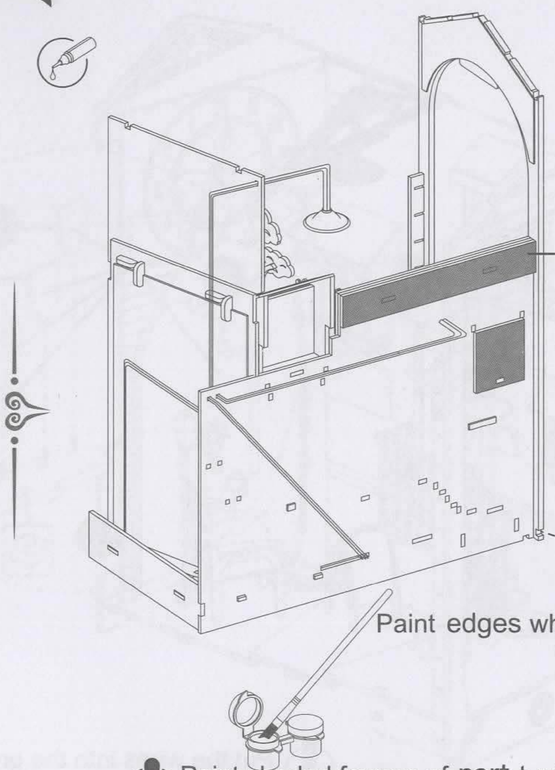

Apply glue on shaded areas.

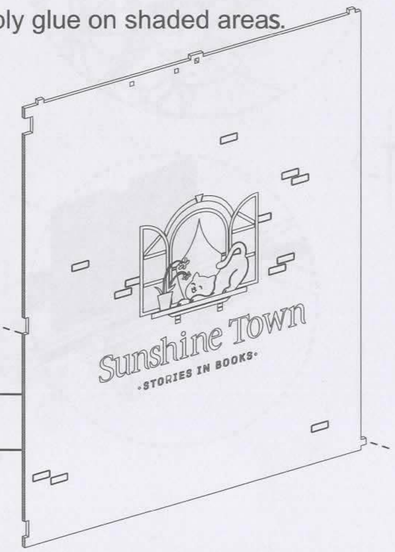

Paint edges white.

t

Paint shaded frames of **part t** white. Apply a dab of glue and press 5s.

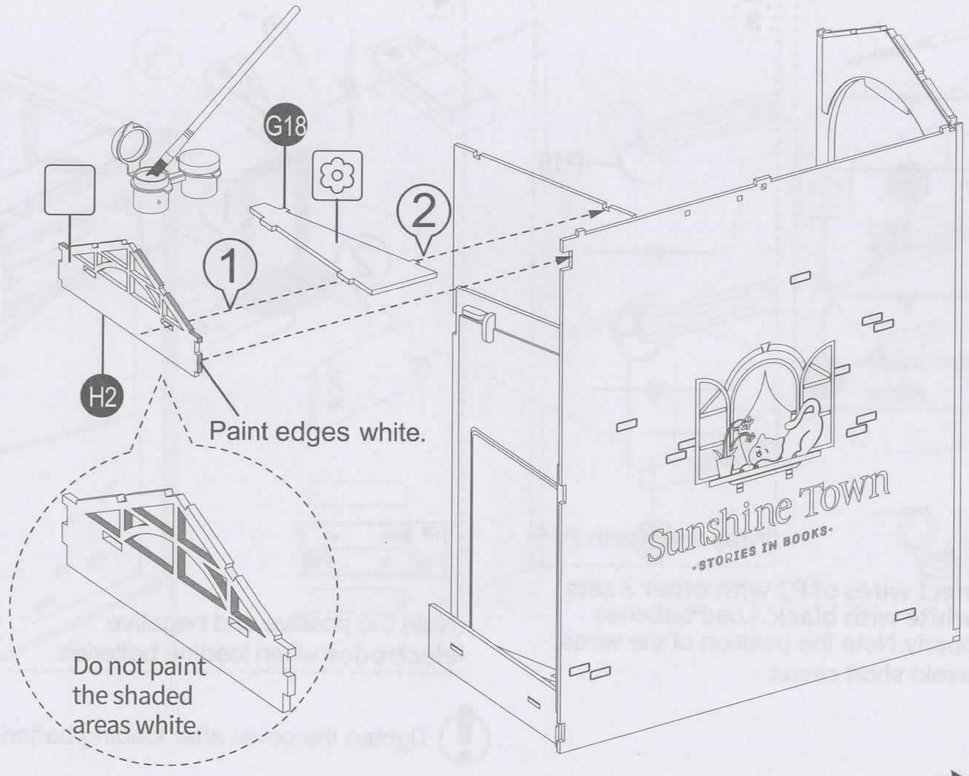
G18
1
2
H2
Paint edges white.
Do not paint the shaded areas white.
Sunshine Town
·STORIES IN BOOKS·

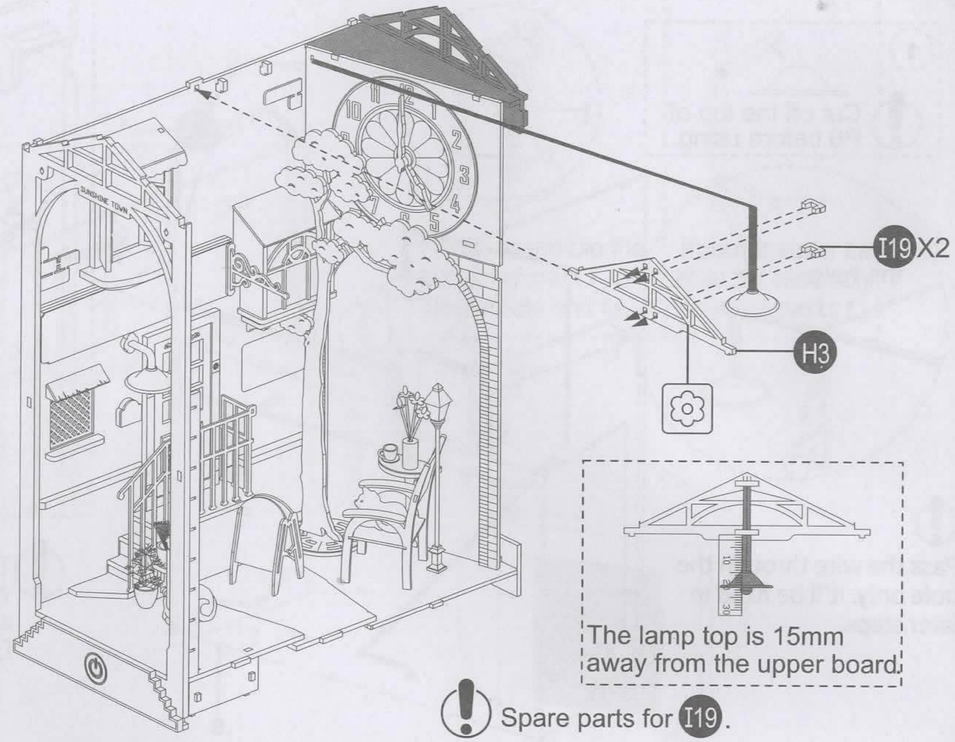
I19 X2
H3
The lamp top is 15mm away from the upper board.
Spare parts for I19.

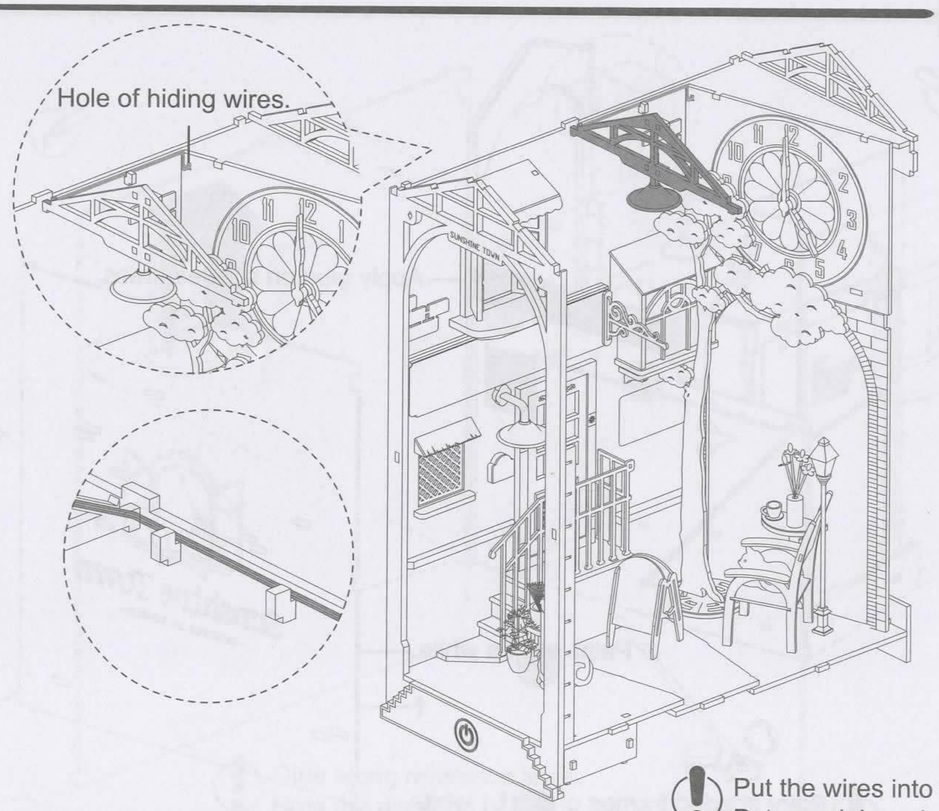
Hole of hiding wires.
Put the wires into the groove.
Put remaining wires into the hole.

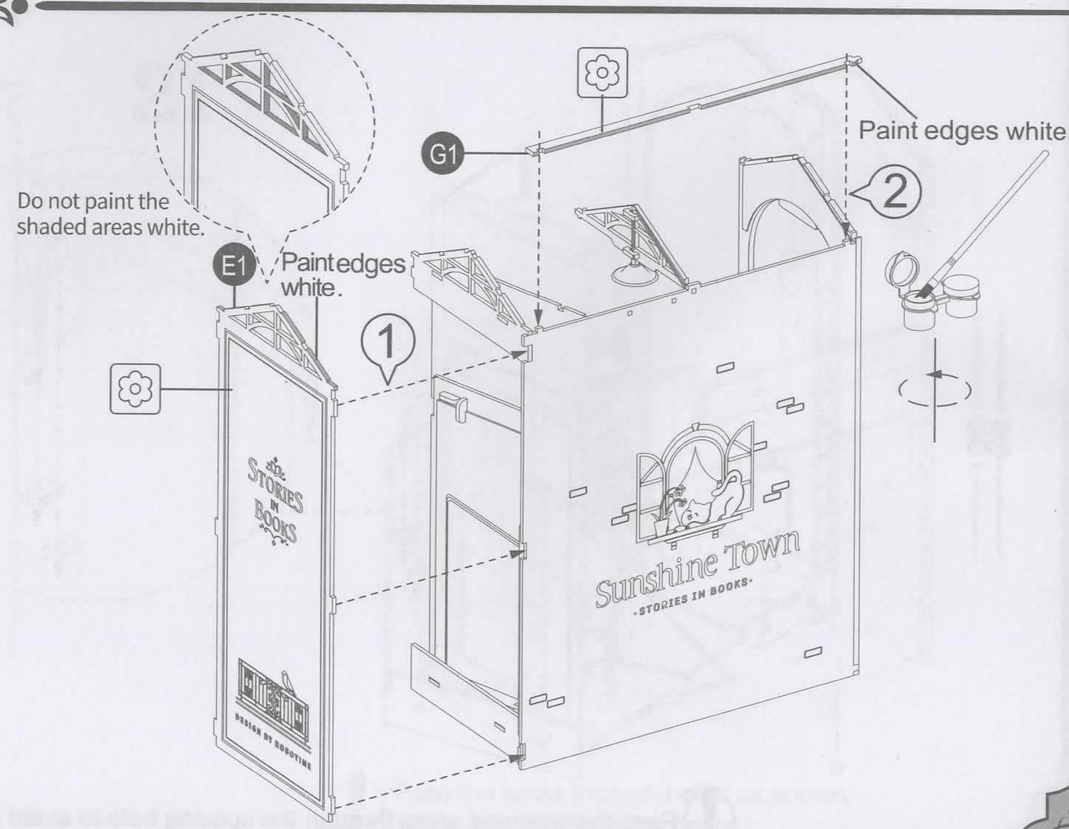
Do not paint the shaded areas white.
G1
Paint edges white.
2
E1
Paint edges white.
1
STORIES IN BOOKS
Sunshine Town
·STORIES IN BOOKS·

22

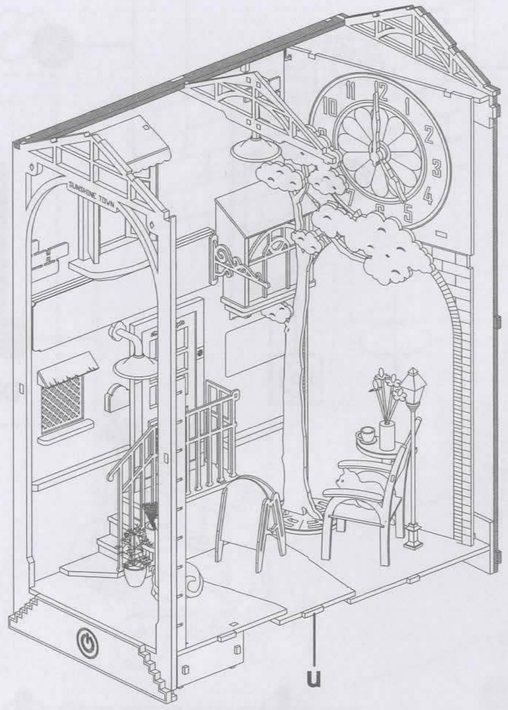

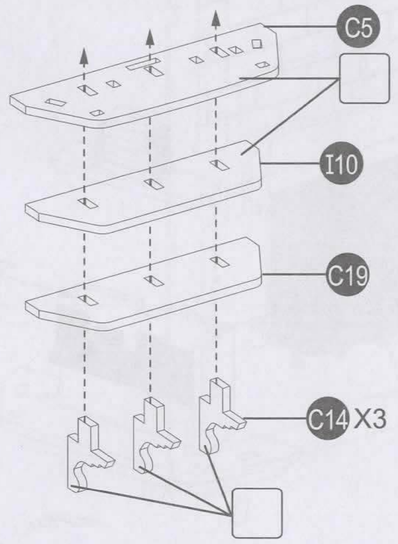

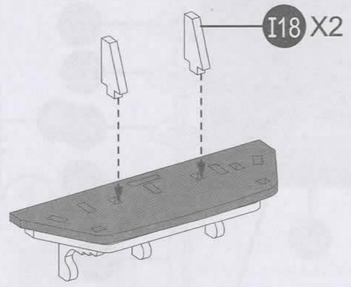

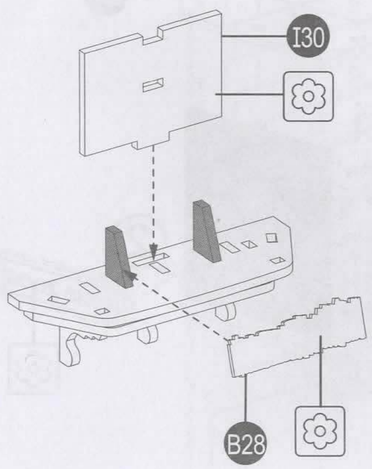

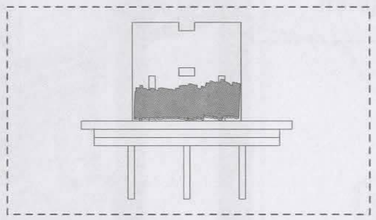

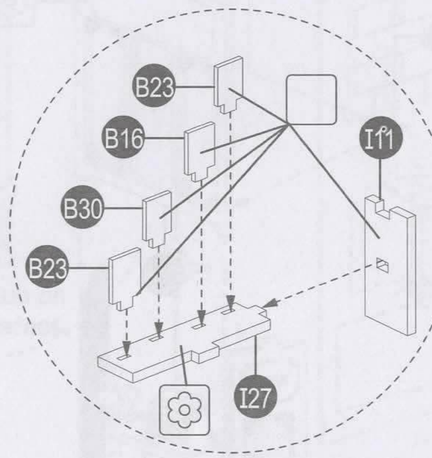

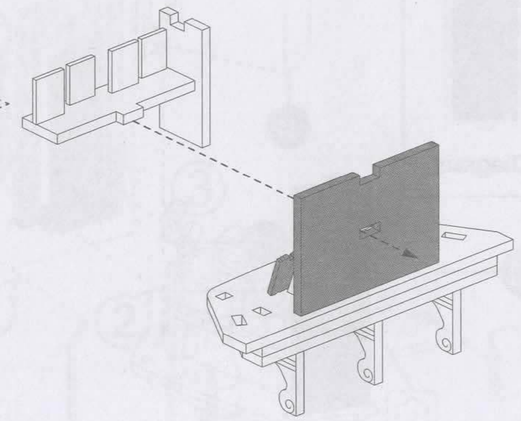

Glue B28 as shown.

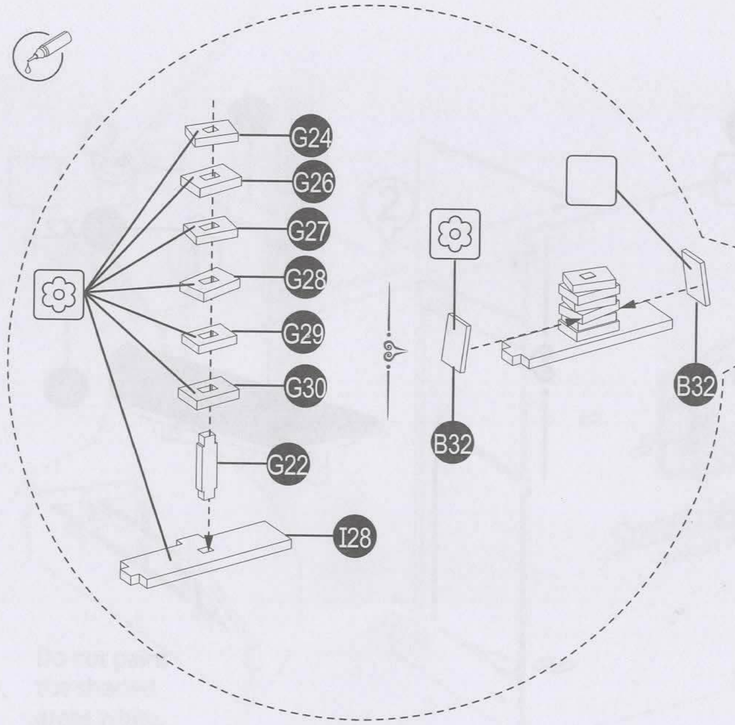

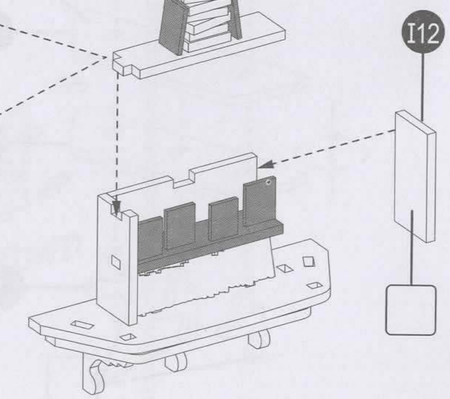

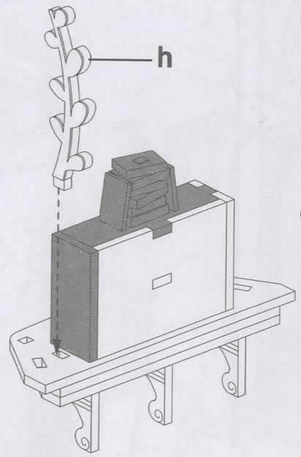

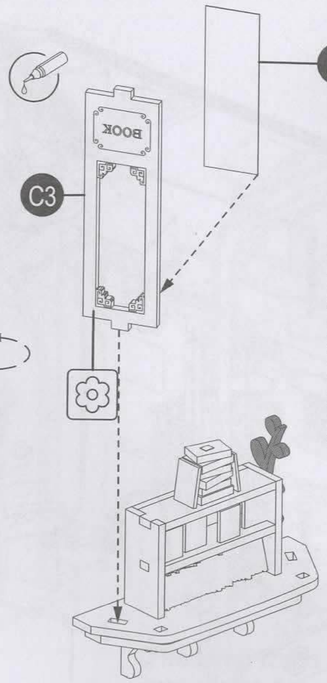

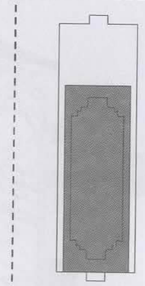
Diagram

Remove the film before using J4.

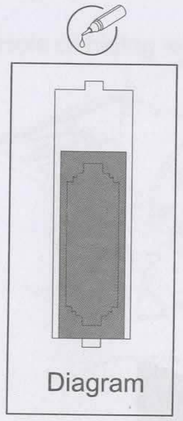
Diagram

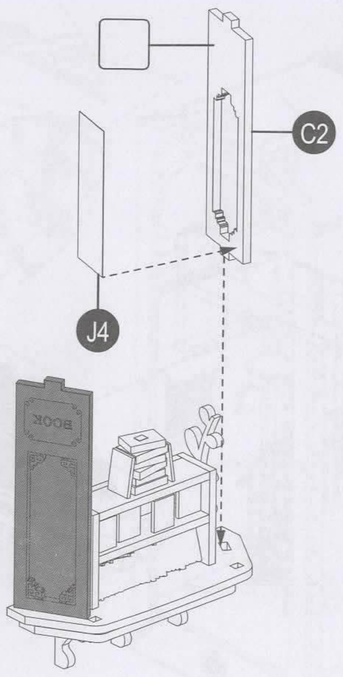

Remove the film before using J4.

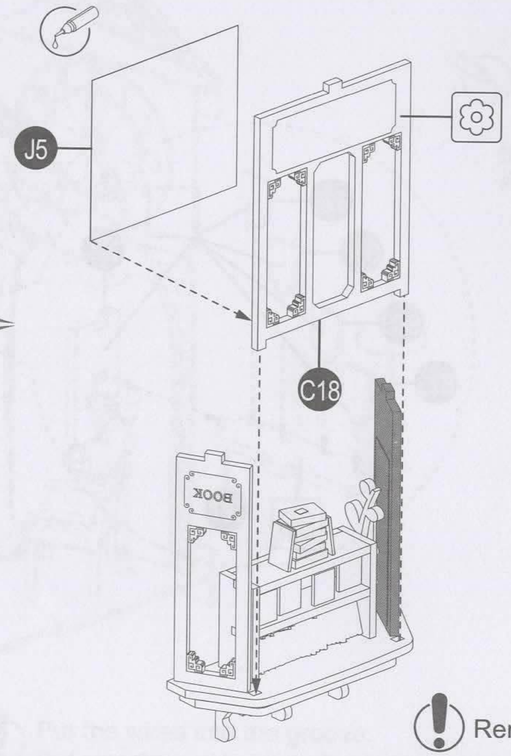

Remove the film before using J5.

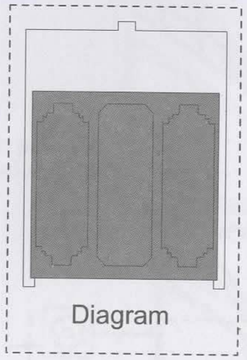
Diagram

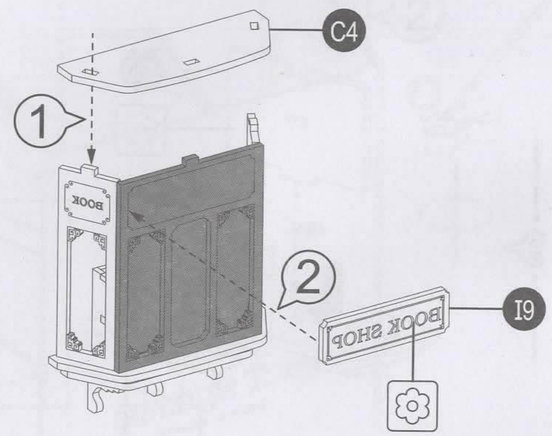

Glue along reference lines.
Apply a dab of glue and press 5s.
Note the direction of I9.
Then glue as shown.

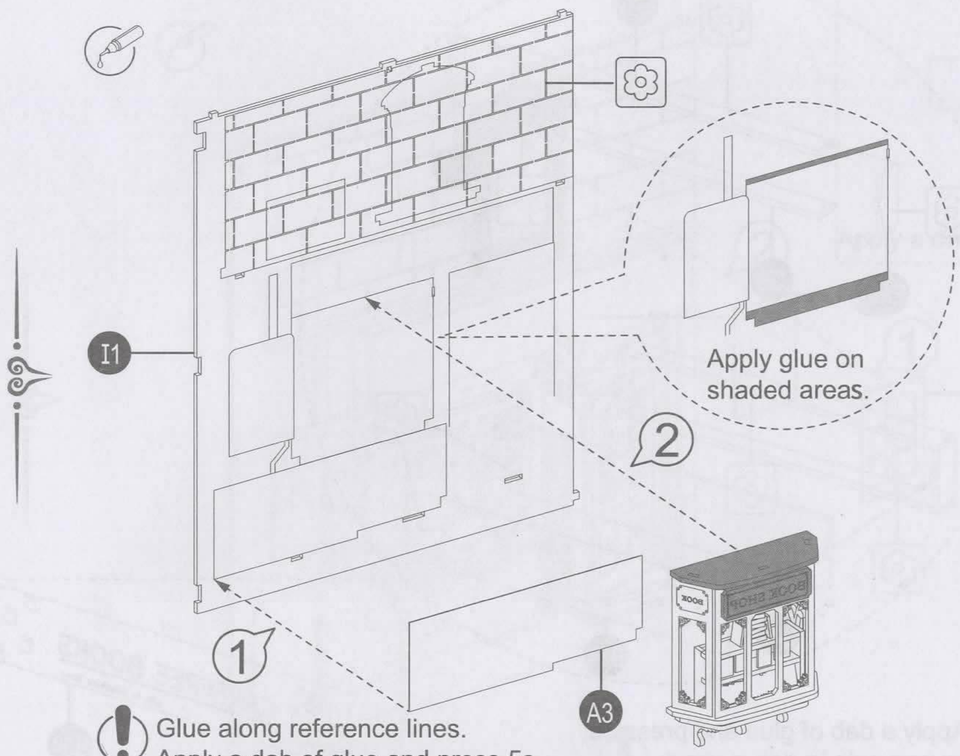

Glue along reference lines.
Apply a dab of glue and press 5s.

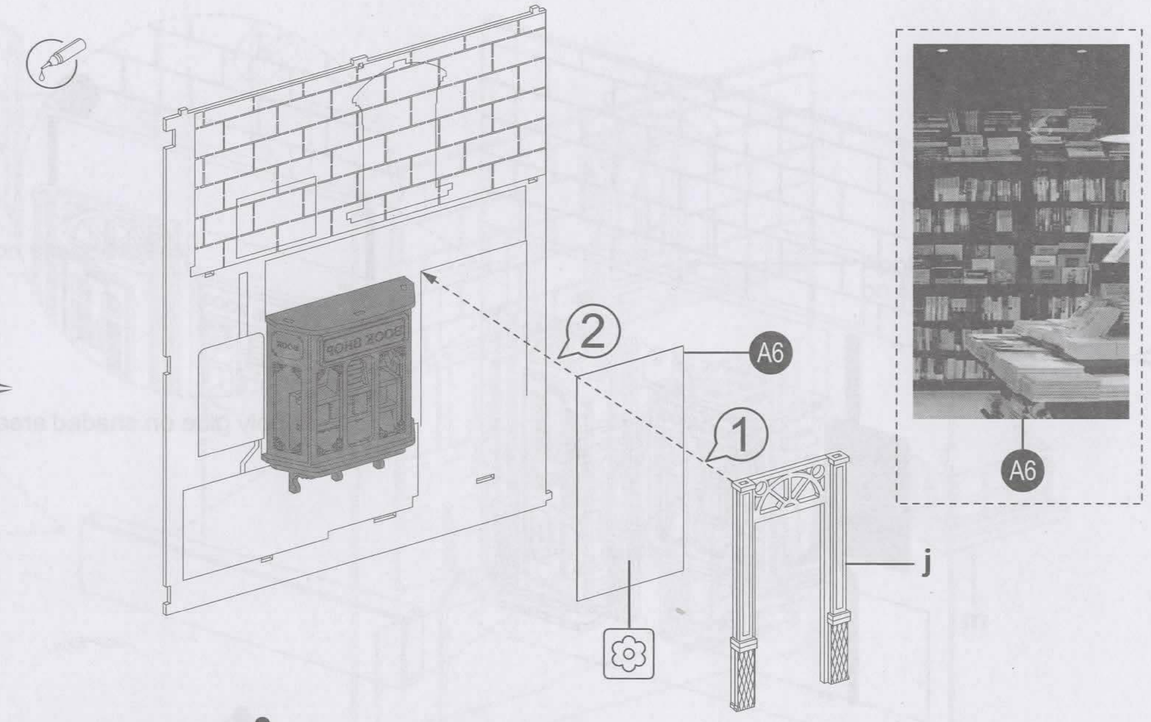

Glue along reference lines.
Apply a dab of glue and press 5s.

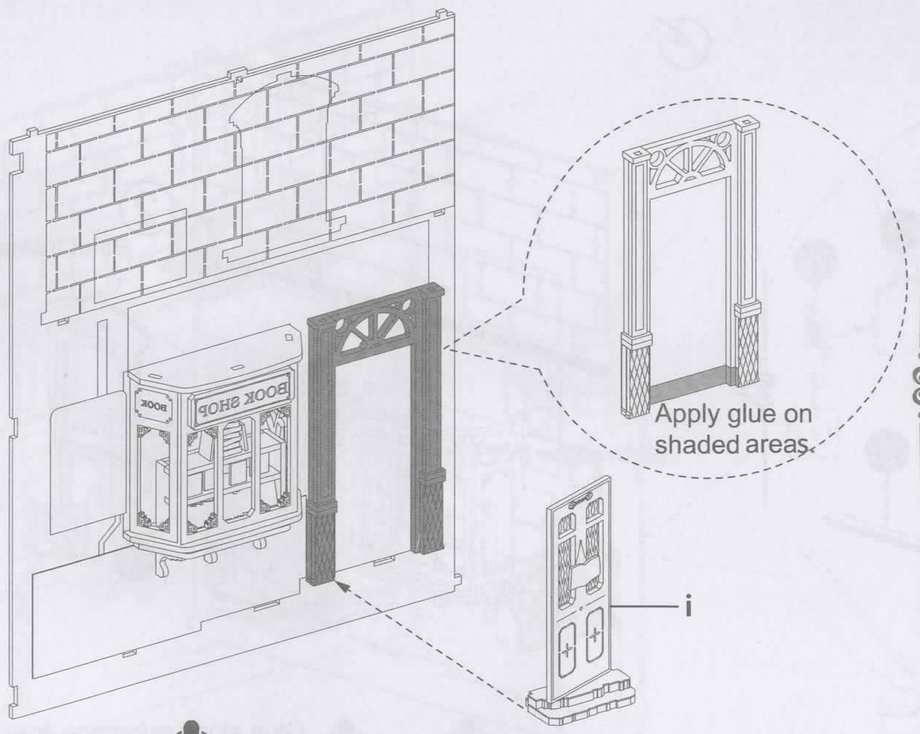

Apply a dab of glue and press 5s.

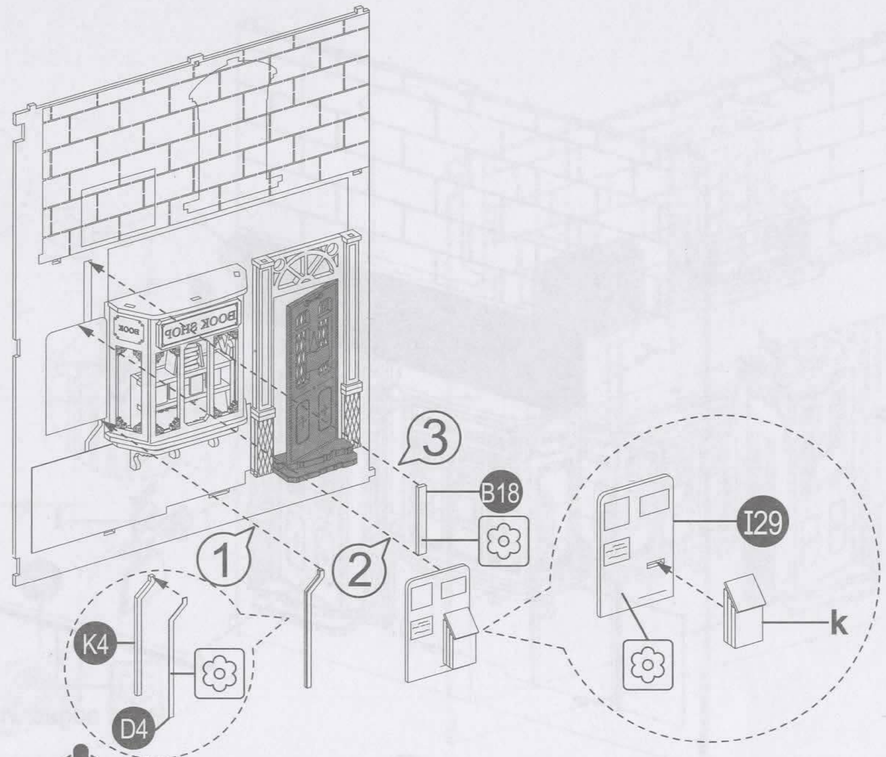

Glue along reference lines. Apply a dab of glue and press 5s.

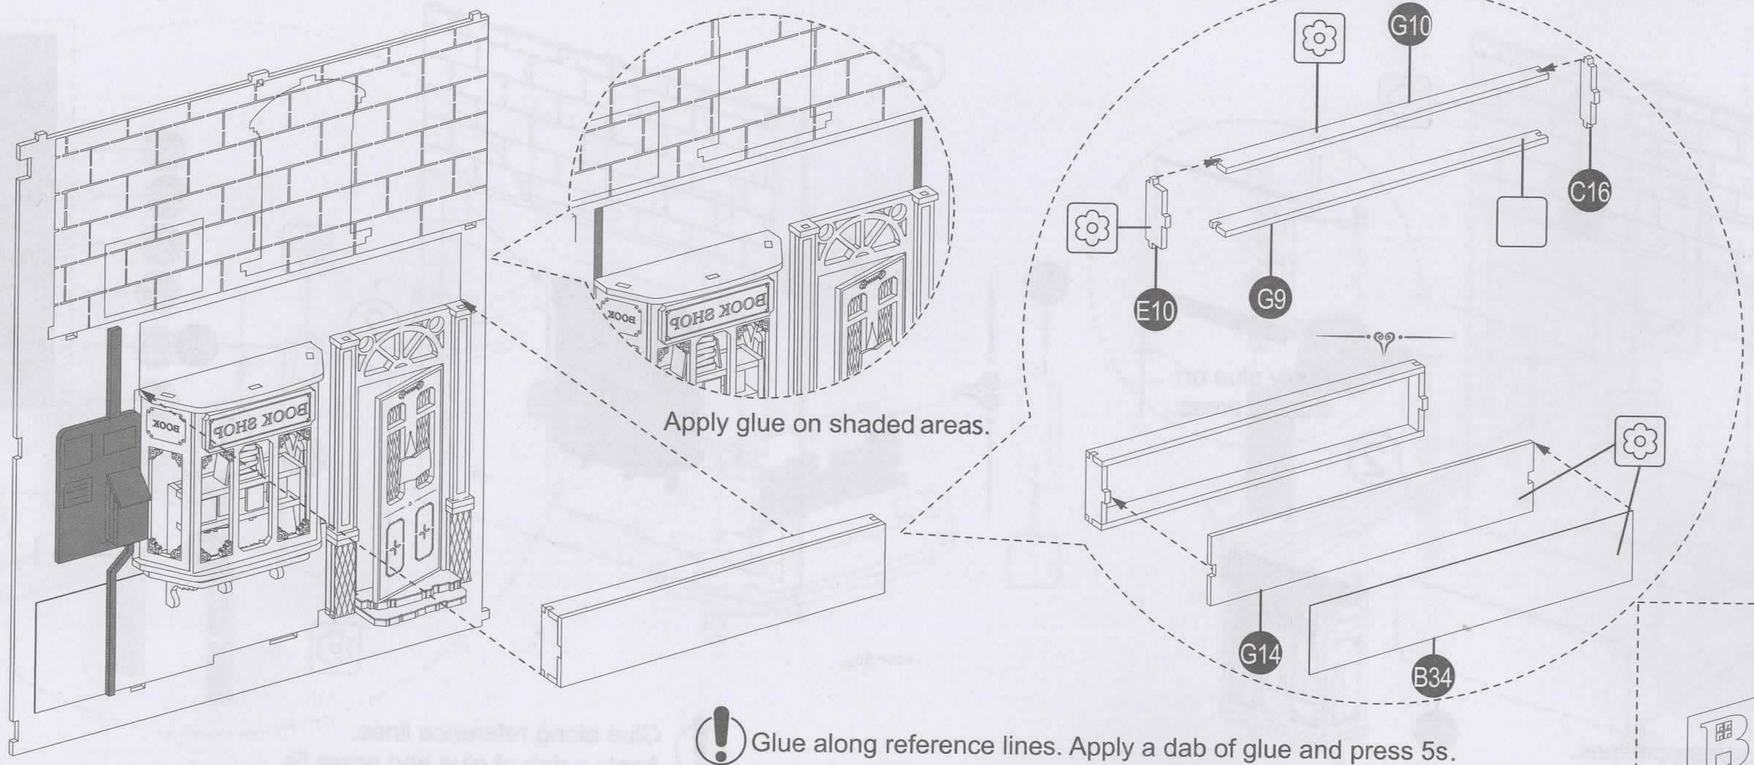
BOOK SHOP
BOOK
Apply glue on shaded areas.
G10
C16
E10
G9
G14
B34
Glue along reference lines. Apply a dab of glue and press 5s.

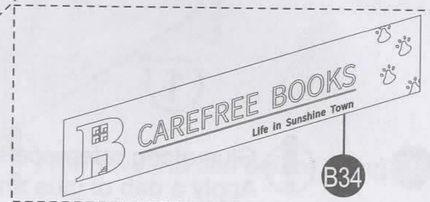
CAREFREE BOOKS
Life In Sunshine Town
B34

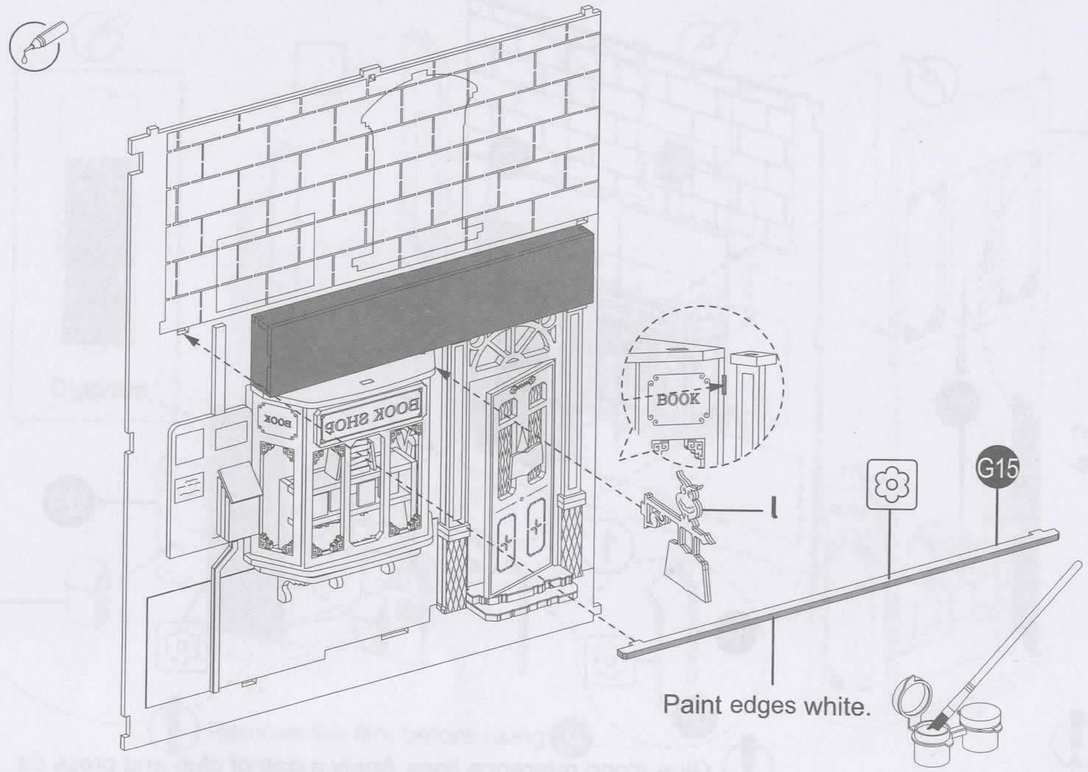
BOOK SHOP
BOOK
BOOK
G15
Paint edges white.

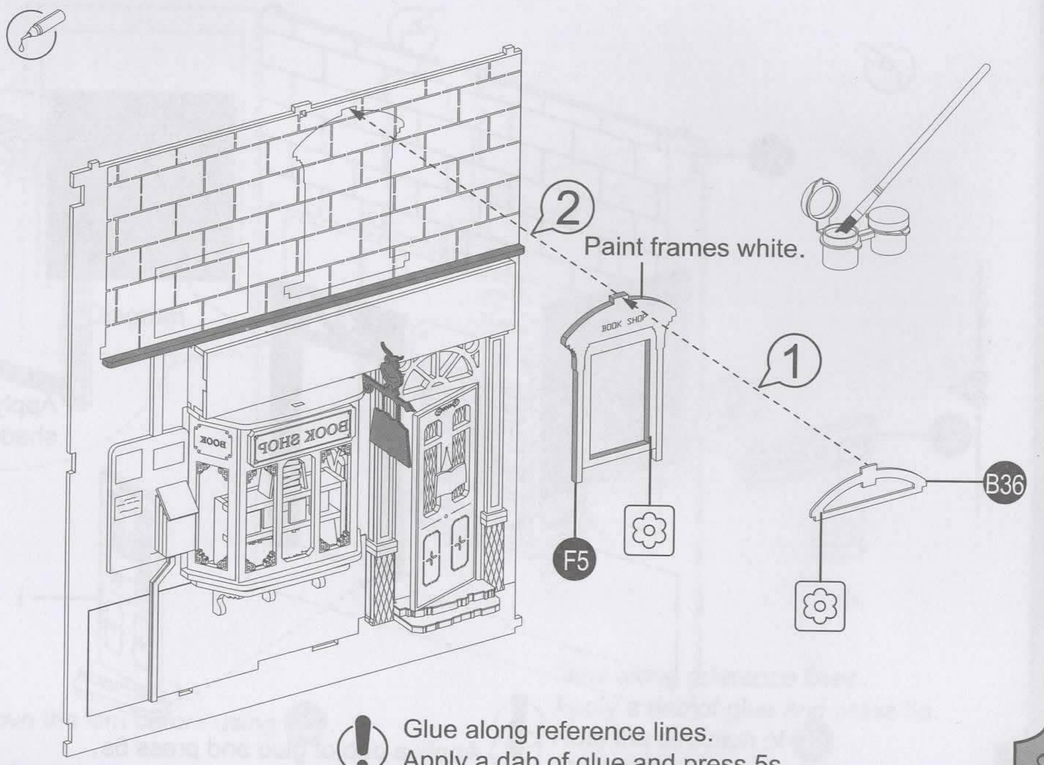
BOOK SHOP
BOOK
2
Paint frames white.
1
F5
B36
Glue along reference lines.
Apply a dab of glue and press 5s.

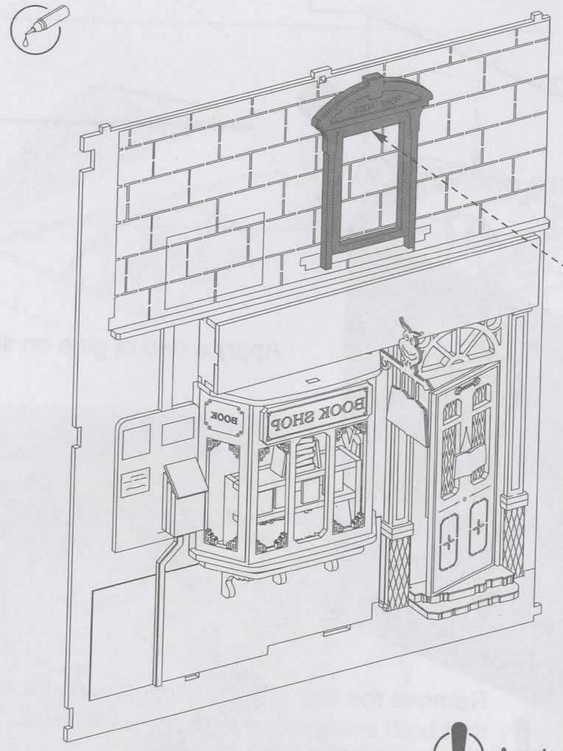

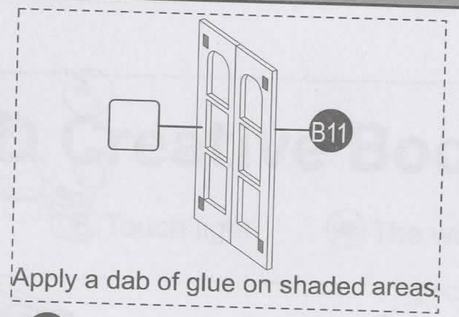

Apply a dab of glue on shaded areas.

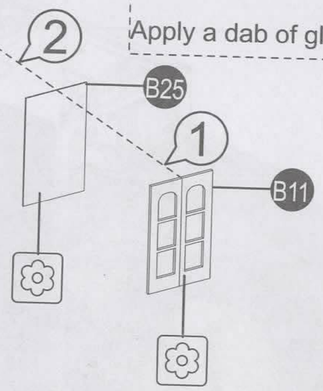

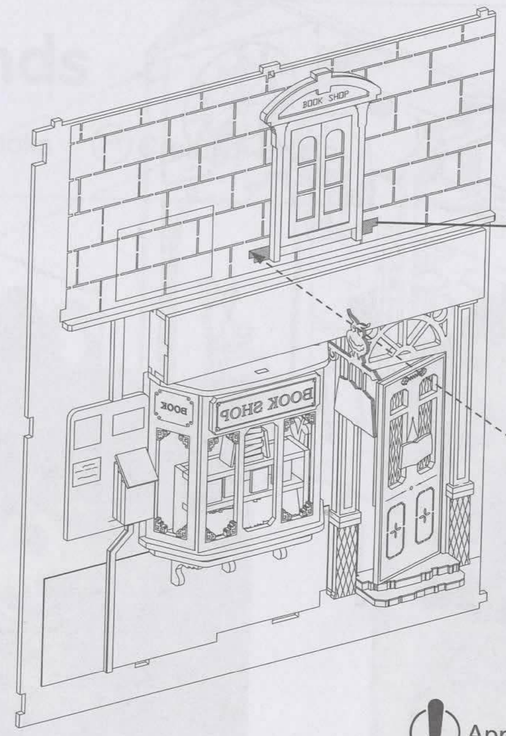

Apply a dab of glue on shaded areas.

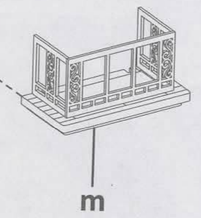

m

Apply a dab of glue and press 5s.

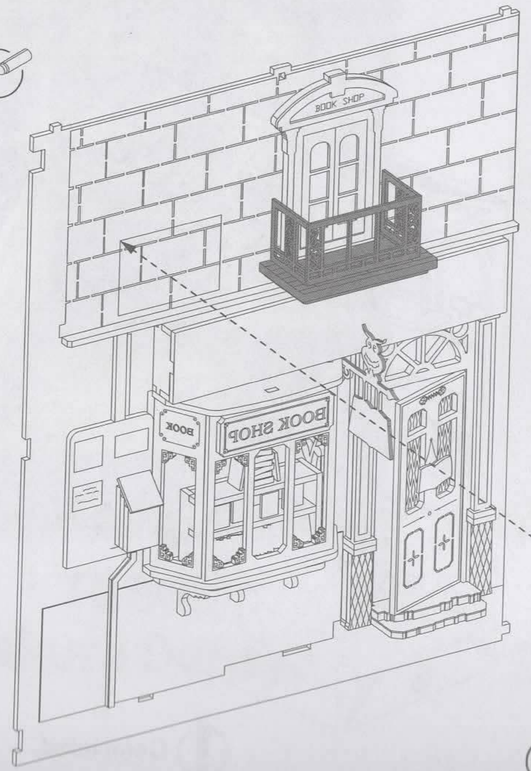

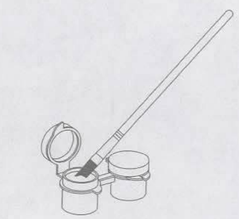

Paint edges white.

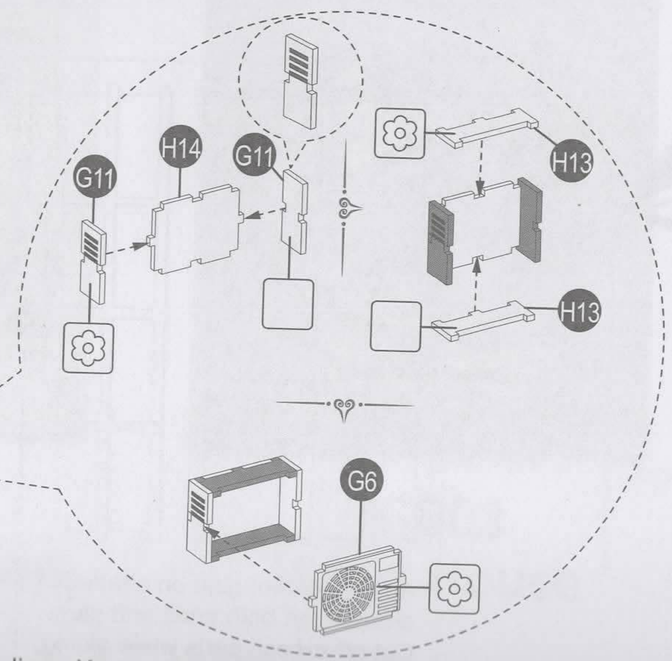

Glue along reference lines. Keep patterns in the same direction while assembling G11.

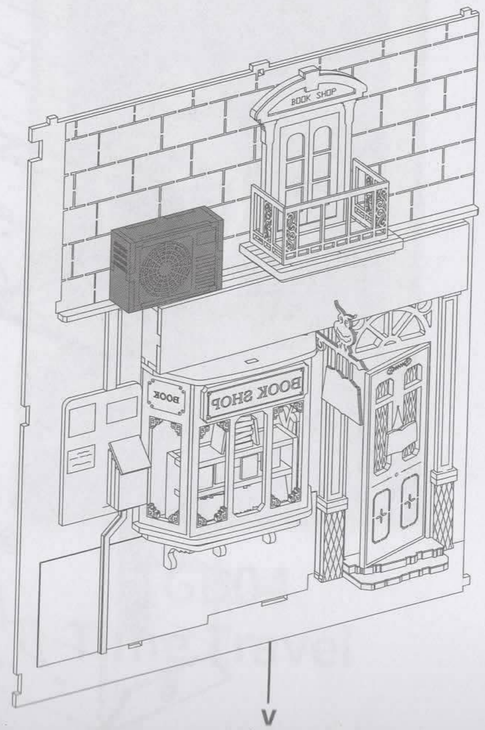

v

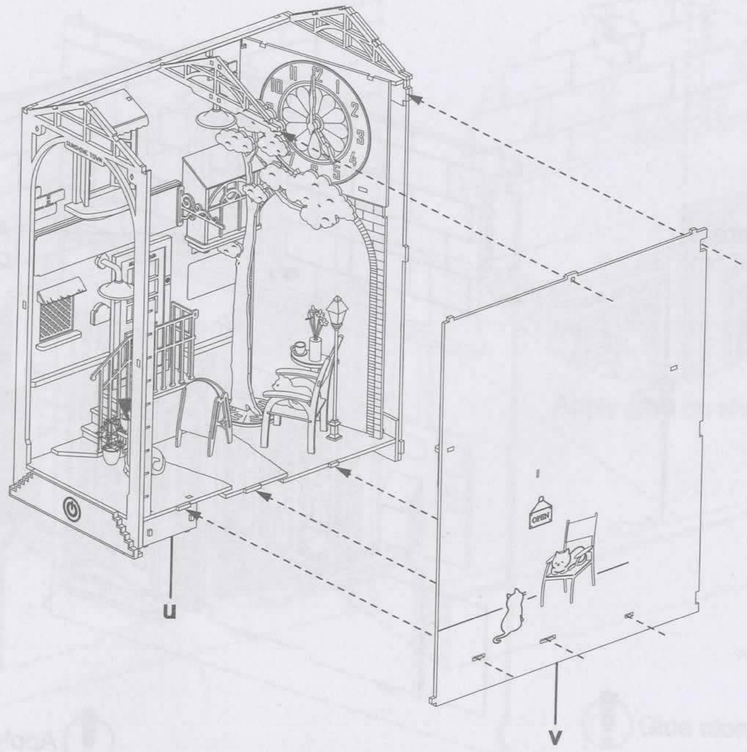

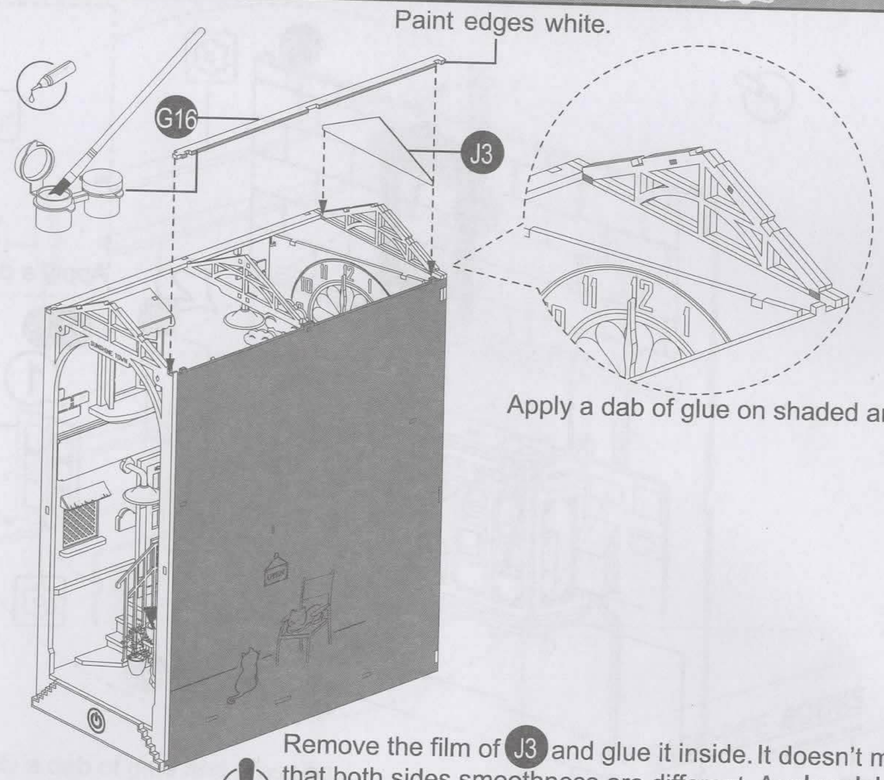

Apply a dab of glue on shaded areas.

Remove the film of J3 and glue it inside. It doesn't matter that both sides smoothness are different. Apply a dab of glue on one side and press 5s.

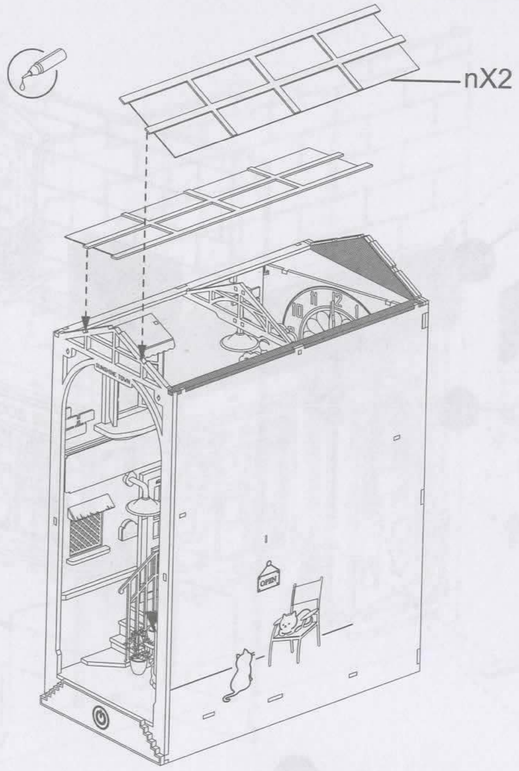

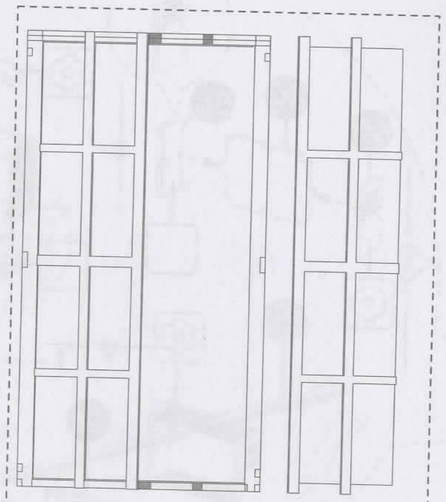

Apply a dab of glue on shaded areas. Align both ends and glue. Cut off excess parts while gluing.

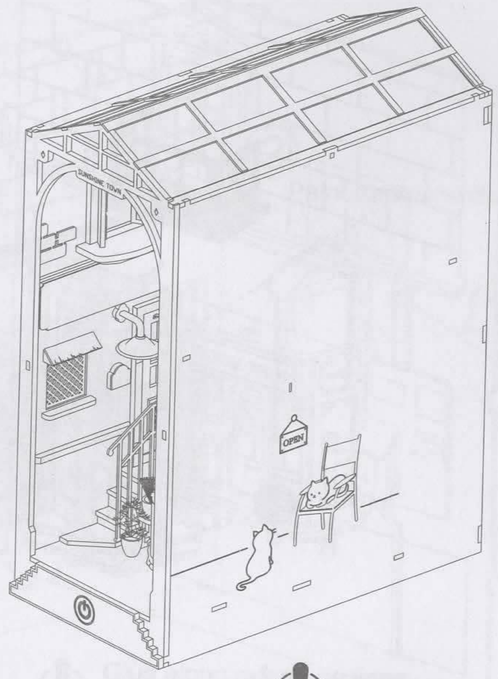

Completed.

3D Creative Bookends

Scenario simulation Touch light The world in books Creative display

TGB01
Sakura Densya

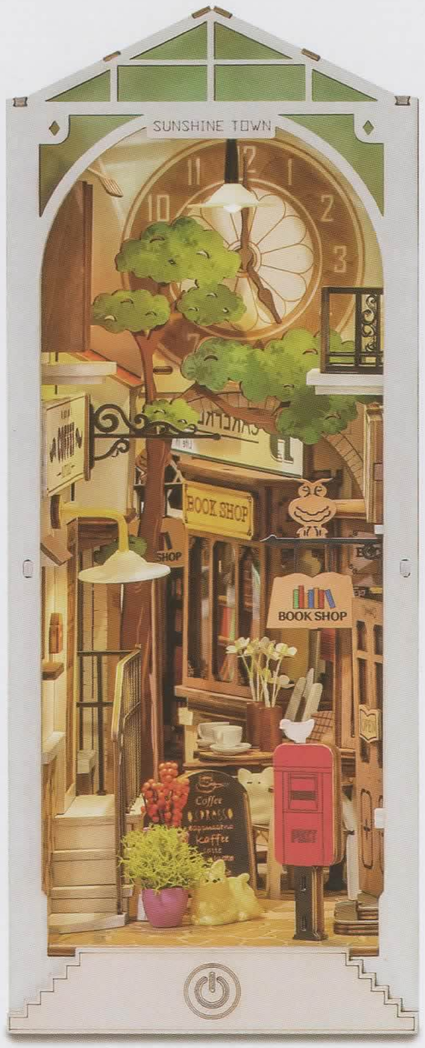

TGB02
Sunshine Town

TGB03
Magic House

TGB04
Time Travel

MANUFACTURER:
Robotime C&C (Jiangsu) Co., Ltd.

ADDRESS:
No. 18 Changxing Road, Shuyang, Suqian City, Jiangsu Province, China

Designed by ROBOTIME
www.robotime.com
MADE IN CHINA

49.1TGB02.100.B